



 
LIFESPAN KIDS

USER MANUAL

Meer Brook Playcentre



Find the Digital
Manual Online

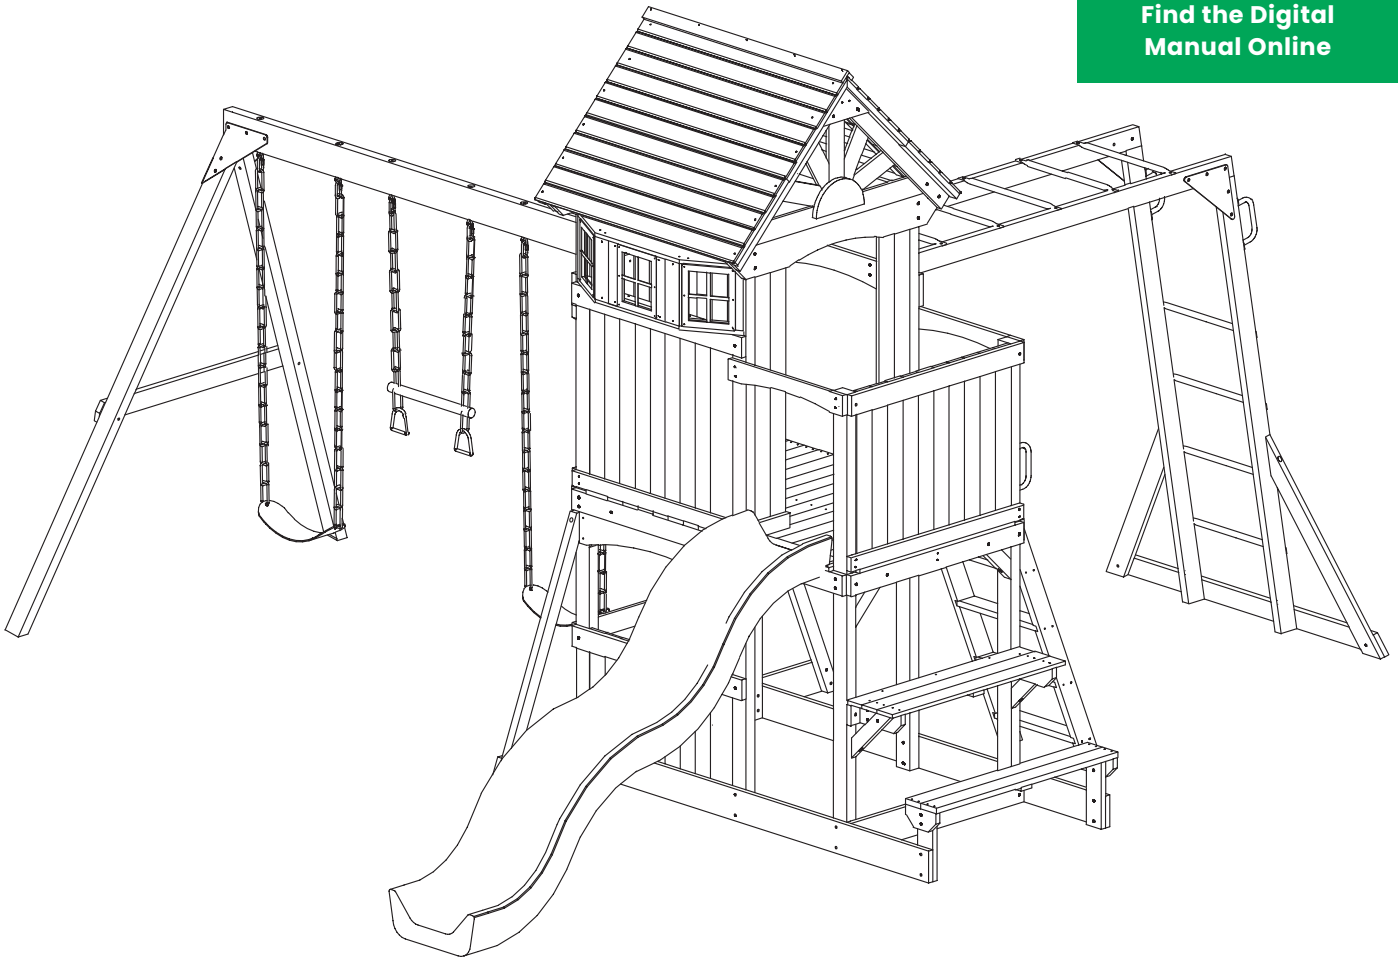

WARNING: The disassembled product may contain small parts which pose a choking hazard to children under 3.

IMPORTANT:

The owner's manual contains safety, assembly, use and maintenance instructions. This product must be assembled by an adult who has read and understood these instructions. Keep the packaging away from children and dispose of all packaging before use.

For the installer and your children's safety, it is important to fully read and understand the instructions and safety hazards before commencing the assembly of the product.

NOTE:

This manual should not be used to guide your purchasing decision. Your product, and the contents inside its carton, may vary from what is listed in this manual. This manual may also be subject to updates or changes. Updated manuals are available through our website at www.lifespankids.com.au.

TABLE OF CONTENTS

I. GENERAL SAFETY INSTRUCTIONS	3
1.1 Danger for Children	3
1.2 Risk of Injuries	3
1.3 Product Damage	3
1.4 Assembly Advice	4
II. SAFETY INSTRUCTIONS	5
III. EXPLODED DIAGRAM	6
IV. ASSEMBLY INSTRUCTIONS	7
V. MAINTENANCE	39
VI. WOOD ADVICE	40
VII. CLEANING	42
VIII. WARRANTY	43

I. GENERAL SAFETY INSTRUCTIONS

NOTE: This product is intended for outdoor domestic use only.

- Maximum Users: 9
- Maximum Fall Height: 2.0m
- A maximum of 68 kgs. per child is recommended for play activities designed for individual use.
- A maximum of 54 kgs. per child is recommended for play activities designed for multiple child use.
- A maximum of 9 children is recommended for this swing set.

1.1 DANGER FOR CHILDREN



WARNING: No eating while using the product at the same time.

- Children do not recognize potential dangers from this product. The unassembled product must be stored out of reach of children and pets.
- This product may only be used with adult supervision at all times.
- The packaging material is not suitable for children due to choking and suffocation hazards.

1.2 RISK OF INJURIES

- Do not use the product if it is damaged or defective. If it is damaged or defective, please contact a qualified technician.
- Check the product before each use. Defective parts must be changed immediately as they can impair the function and the safety of the product.
- No more than one child at a time going down the slide and using the rock climbing wall.
- Use the product only on even and non-slipping surfaces. Never use it near water and keep sufficient space around for safety.
- Beware of moving parts such as the springs or elastics, which could catch your arms and legs. Do not place any objects or body parts in the product's openings.

1.3 PRODUCT DAMAGE

- Do not make alterations to the product. Only use original spare parts. Qualified technicians should only carry out repairs – improper repairs can lead to danger for the user. Use this product only as described in this manual.

1.4 ASSEMBLY ADVICE

- The assembly of the product must be done carefully and by an able-bodied adult. If in any doubt, ask a technically qualified person.
- Before you start with the assembly, read the instructions carefully.
- Remove all packaging materials and lay down all parts on an open space. This gives you an overview and simplifies the assembly procedure.
- Check with the parts list that all parts are available. Dispose of the packaging material when the assembly is completed.
- Beware that when using tools or doing technical work, there is always a risk of injuries. Assemble the product with care.
- Create a danger free environment; for example, do not let tools lay around the workspace. Store the packaging material in a way that cannot cause any danger.

- After installing the product according to the instruction manual, ensure all screws, bolts and nuts are correctly installed and tightened and that all joints are secure.
- Reasonable space must be kept between the product and possible sources of danger, such as other equipment swimming pools and fences.
- The product must be assembled correctly before use.
- Your play structure must be installed on a flat horizontal surface with a minimum of 2m between it and any structure or obstacle such as a fence, garage house, tree branches, cloths lines, or electric cables.
- Modifications made to the original product shall be carried out according to the instructions of the manufacturer.
- The product must always be used in a well-lit area.
- Do not place anything under the product.
- Use gloves during assembly and disassembly.
- Outdoor products should be equipped with devices to prevent displacement in strong wind conditions (e.g. steel bars in the ground or loads like sandbag or water bags).
- In certain areas during winter, snow buildup and the low temperatures can damage the product. It is recommended to remove snow buildup and to store the product indoors.
- We strongly recommend visual inspections every 3 months to ensure the integrity of the entire product. Replace any parts as necessary.

II. SAFETY INSTRUCTIONS

- The safety instructions of the product should always be considered and obeyed.
- Using this product incorrectly may result in permanent injury such as paralysis, or even death. Falling off the product may lead to injuries, particularly to the back, neck or head.
- No clothes with hooks or lose parts should be worn or carried during product usage in order to avoid hooks getting caught and causing injury.
- Strong winds can result in the product being blown away or damaged. If strong winds are predicted, the product must be disassembled and moved to a sheltered area or sufficiently anchored down.
- Moving the product whilst assembled may affect the integrity of the frame. Should it be necessary to move the product, please consider the following:
 1. Force to be evenly spaced around the frame to lift the product off the ground.
 2. The product must be carried horizontally.
 3. Use caution whilst moving as it could bend the product frame.
- Users should be familiar with the assembly manual. This manual contains assembly guidance; selected precautionary measures as well as recommendations for servicing and maintenance of the product, in order to ensure a secured and fun use of the product.
- It is the responsibility of the owner or the supervisor to guarantee that all users of the product are informed sufficiently of all warning references and safety instructions.

For the supervisor

The supervisor's role is to make sure users are aware of all safety precautions and that these precautions are enforced. When a supervisor is not available, the product may be disassembled or covered to limit access.

- The product can be only used if it is in good condition, worn or damaged parts should be replaced.
- Objects, which could be dangerous to the user, should be away from the product.
- Avoid unauthorized and unsupervised use of the product.
- Do not use the product under influence of alcohol or drugs (incl. medicines).
- Do not use the product as a jumping platform for other articles.

Consumer Information Sheet for Playground Surfacing Materials

The US Consumer Product Safety Commission (CPSC) estimates that about 100 000 playground equipment-related injuries resulting from falls to the ground surface are treated annually in US hospital emergency rooms. Injuries involving this hazard pattern tend to be among the most serious of all playground injuries, and have the potential to be fatal, particularly when the injury is to the head. The surface under and around playground equipment can be a major factor in determining the injury-causing potential of a fall. It is self-evident that a fall on to a shock-absorbing surface is less likely to cause a serious injury than a fall onto a hard surface. Playground equipment should never be placed on hard surfaces, such as concrete or asphalt, and while grass may appear to be acceptable, it may quickly turn to hard-packed earth in areas of high traffic. Shredded bark mulch, wood chips, tine sand or the gravel are considered to be acceptable shock absorbing surfaces when installed and maintained at a sufficient depth under and around playground equipment.

Table B.1 Lists the maximum height from which a child would not be expected to sustain a life-threatening head injury in a fall on to four different loose-fill surfacing materials if they are Installed and maintained at depths of 150 mm, 225 mm and 300 mm.

Table B.1 Fall height in millimetres from which a life-threatening head injury would not be expected.

Type of Material	Depth of surfacing material		
	150mm	225mm	300mm
Double Shredded Bark Mulch	1800	3000	3300
Wood Chips	1800	2100	3600
Fine Sand	1500	1500	2700
Fine Gravel	1800	2100	3000

However, it should be recognised that all injuries due to falls cannot be prevented, no matter what surfacing material is used.


It is recommended that a shock absorbing material extend a minimum of 1 800 mm in all directions from the perimeter of stationary equipment such as climbing frames and slides. However, because children may deliberately jump from a moving swing, the shock absorbing material should extend in the front and rear of a swing a minimum distance of twice the height of the pivot point measured from a point directly beneath the pivot on the supporting structure.

 
This information is intended to assist in comparing the relative shock-absorbing properties of various materials. No particular material is recommended over another. However, each material is only effective when properly maintained. Materials should be checked periodically and replenished to maintain correct depth as determined necessary for the equipment in question. The choice of a material depends on the type and height of the playground equipment, the availability of the material in a particular area, and its cost.


III. EXPLODED DIAGRAM





IV. ASSEMBLY INSTRUCTIONS


B1=1 
2420×134×50mm


B2=2 
2159×76×50mm

 
C1=1 
2420×76×50mm

 
C2=1 
2420×76×50mm


C3=1 
2420×76×50mm


C4=1 
2420×76×50mm


C5=2 
1930×76×50mm

 
D1=2 
2028×134×24mm


D2=1 
966×134×24mm

D3=1 
966×134×24mm


D4=1 
966×134×24mm


D5=1 
1204×134×24mm

D6=1 
1906×134×24mm

 
D10=2 
268×134×24mm

D11=2 
268×134×24mm


F1=1 
1540×86×24mm

F2=1 
1540×86×24mm

SILL=1

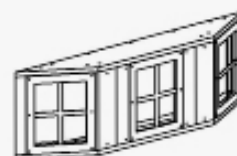



FP1=2

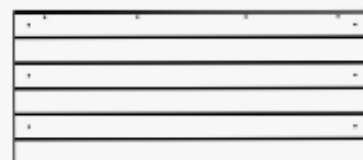 



FP2=2

 



F3=2 
966×86×24mm


F4=2 
650×86×24mm


F5=2 
966×86×24mm

 
F6=1 
1204×86×24mm


F7=1 
966×86×24mm

 
F8=2 
234×86×24mm

 
F9=2 
330×60×24mm


F10=2 
1014×86×24mm


F11=2 
172×86×24mm

 
F12=2 
300×86×24mm


F13=1 
966×60×24mm

 
F14=2 
966×60×24mm

 
F15=1 
966×86×24mm


F16=2 
162×60×24mm

 F17=2 
222×60×24mm

 F18=1 
966×86×24mm

 F19=2 
966×86×24mm

 
F21=2 
794×86×24mm

F22=2 
880×86×24mm

F23=4 
458×86×24mm

F26=1 
1185×86×24mm

F30=1 
1056×86×24mm

FA26=6 
86×76×24mm

H1=2 
866×100×16mm

H2=12 
1014×86×16mm

H3=2 
1014×76×16mm

H4=1 
1014×120×16mm

H8=1 
966×86×16mm

H9=2 
966×86×16mm

H10=1 
232×60×16mm

H11=1 
170×60×16mm

H12=1 
847×120×16mm

H13=8 
847×86×16mm



 


 




 





 

 


H14=10 
738×86×16mm

H15=1 
598×120×16mm

H16=8 
598×86×16mm


H17=4 
903×86×16mm


H18=10 
1228×86×16mm


F28=2			
	998×86×24mm		
F29=1			
	1558×86×24mm		
H19=1		K23=1	
	931×134×16mm		1284×86×35mm
H20=1		K33=8	
	866×76×16mm		330×60×35mm
H22=2		T1=2	
	879×86×16mm		89×60×24mm
H23=1			
	498×86×16mm		
H24=2			
	454×86×16mm		
H25=4			
	327×86×16mm		
H26=4			
	332×86×16mm		
H27=2			
	1205×86×16mm		
H28=4			
	110×86×16mm		
H29=1			
	1133×35×16mm		
H30=1			
	1133×50×16mm		
K1=1			
	1540×60×35mm		
K2=2			
	1180×60×35mm		
K8=2			
	2030×86×35mm		
K9=2			
	1935×86×35mm		
K22=1			
	1284×86×35mm		


PARTS LIST


AN8 
A-NUT8 X6


W10/18 
Washer X106

W12/28 
Washer X6


BM818 
B-NUT x29


N815 
NUT x124


M821 
Bolt x16

 
S315 
Screw x12


M833 
Bolt x18


S321 
Screw x8

M845 
Bolt x29

S328 
Screw x5


M855 
Bolt x14


SW25 
Screw x9


M869 
Bolt x42


SW35 
Screw x367


M896 
Bolt x28


SW40 
Screw x4

SW50 
Screw x82

 SW60 
Screw x4

M6SW35 
Screw x48

 M6SW55 
Screw x14

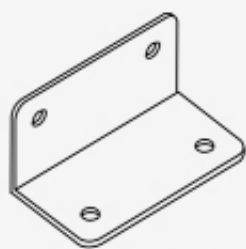

(2) L651003



(1) L651022



 
(1) L651023



(1) L651024




(4) 151003

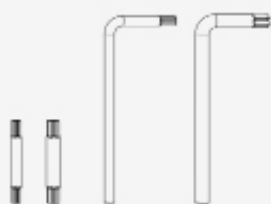

Star Bit (S)
Star Bit (L)
Allen Wrench (S)
Allen Wrench (L)



 
(6) 650007

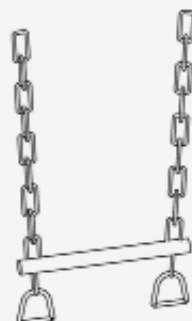

(1) 108002



 
(2) 108001

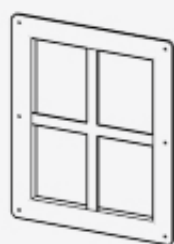

(2) 650051



 (9) L651006

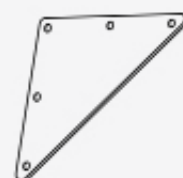


(2) L651007




(9) 139070



 (1) 151090

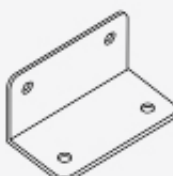

 
(4) L651015

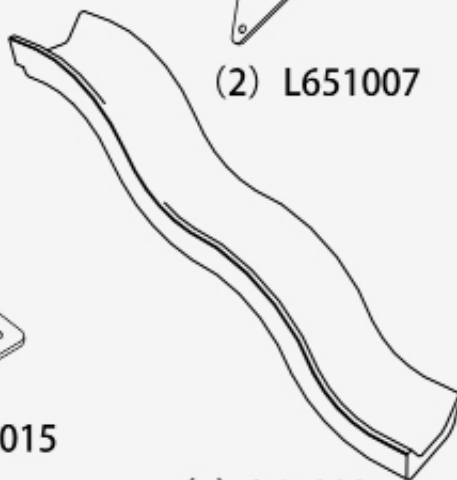


(1) L650001

3.1 SET UP

 
STEP 1

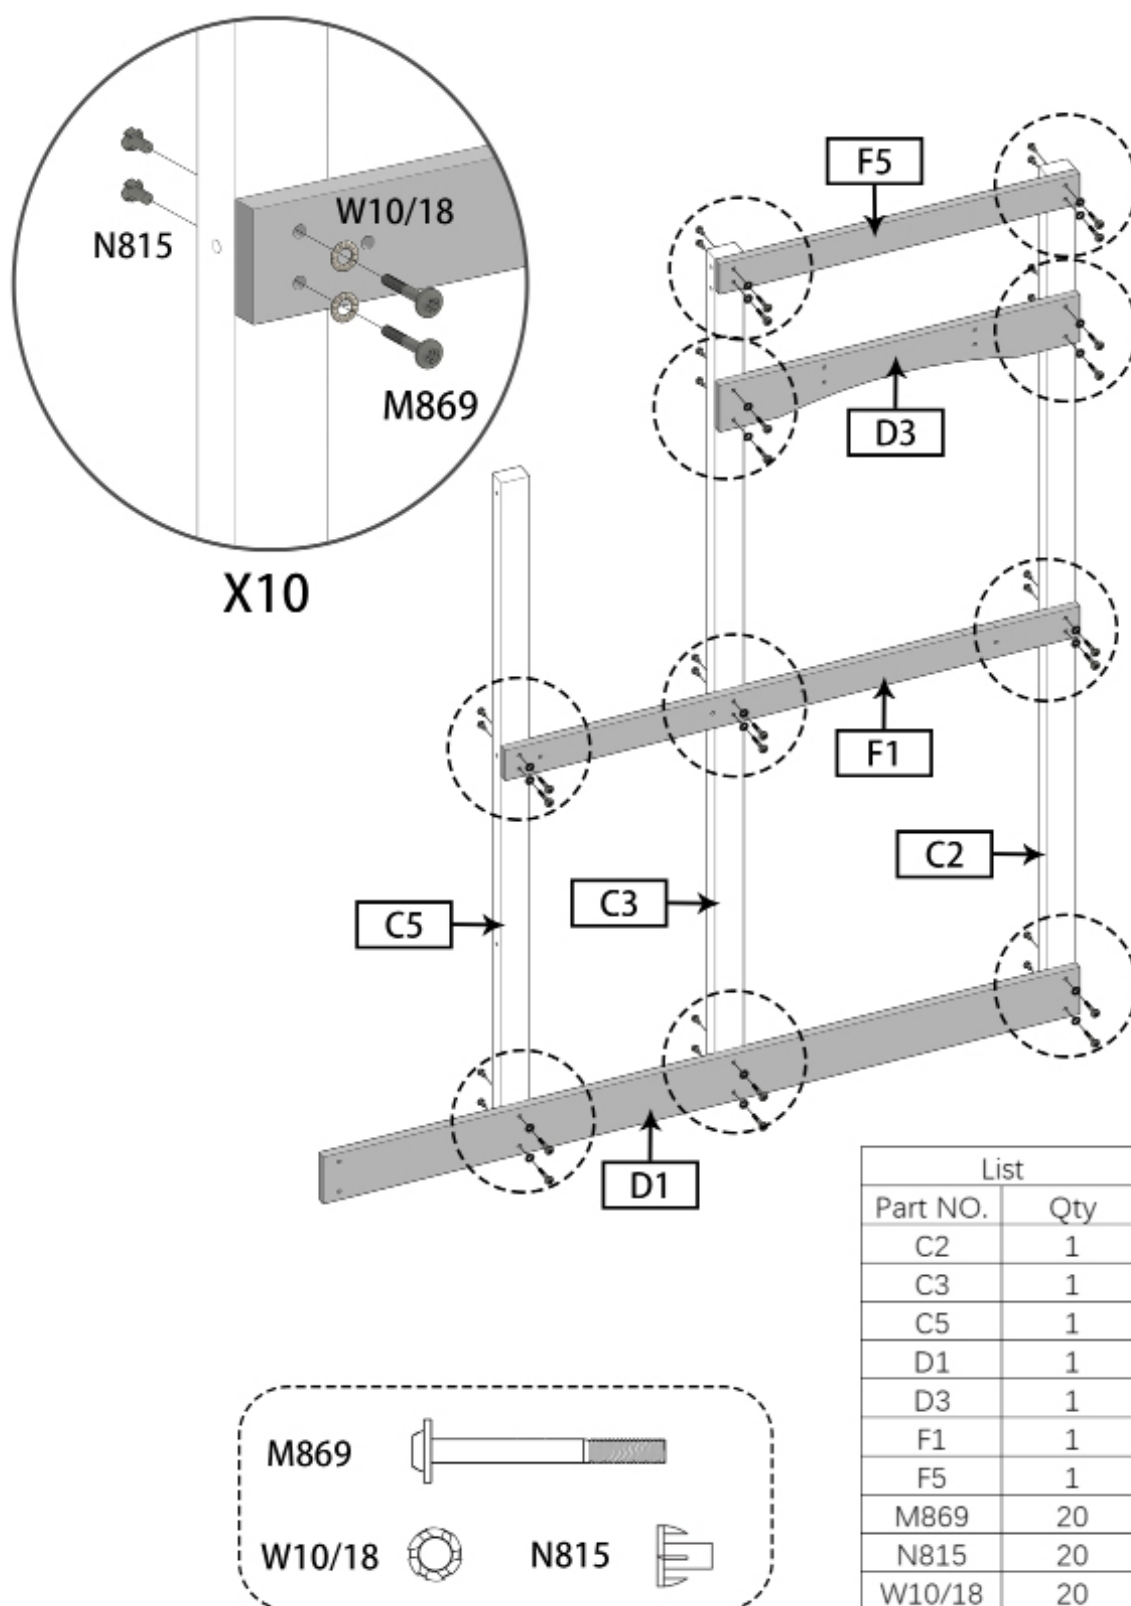

 
STEP 2

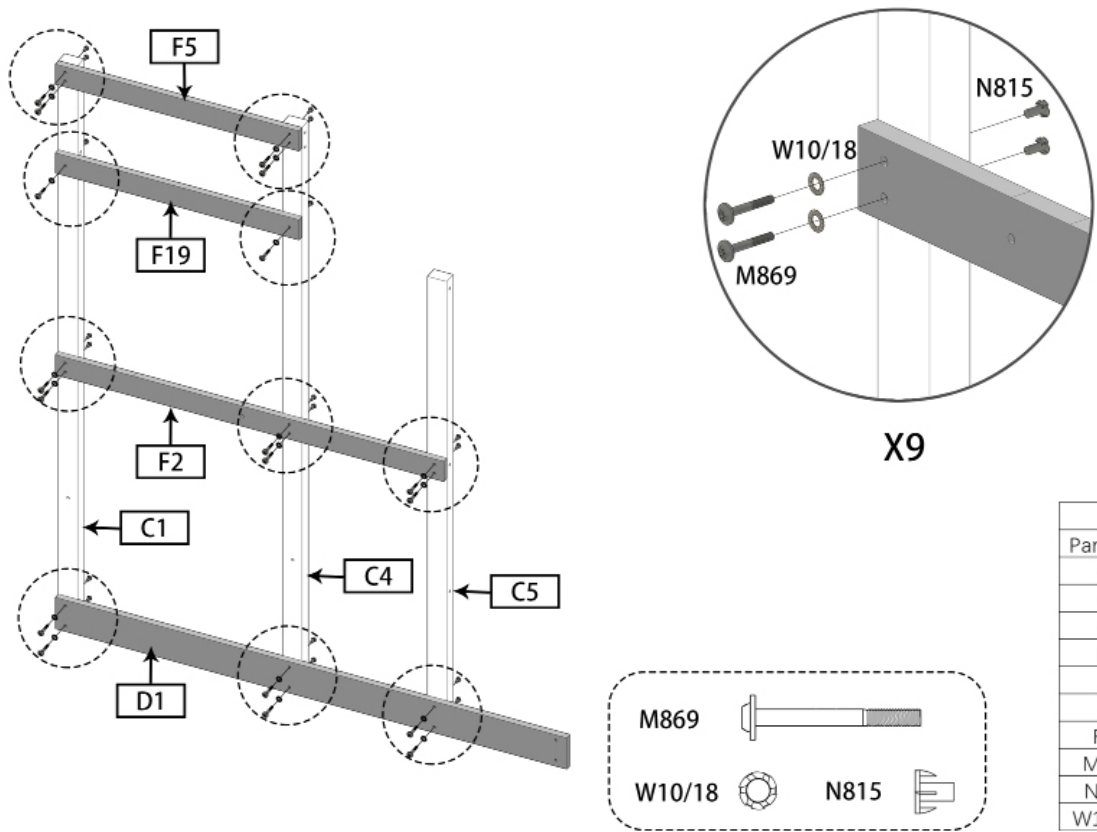

 
STEP 3

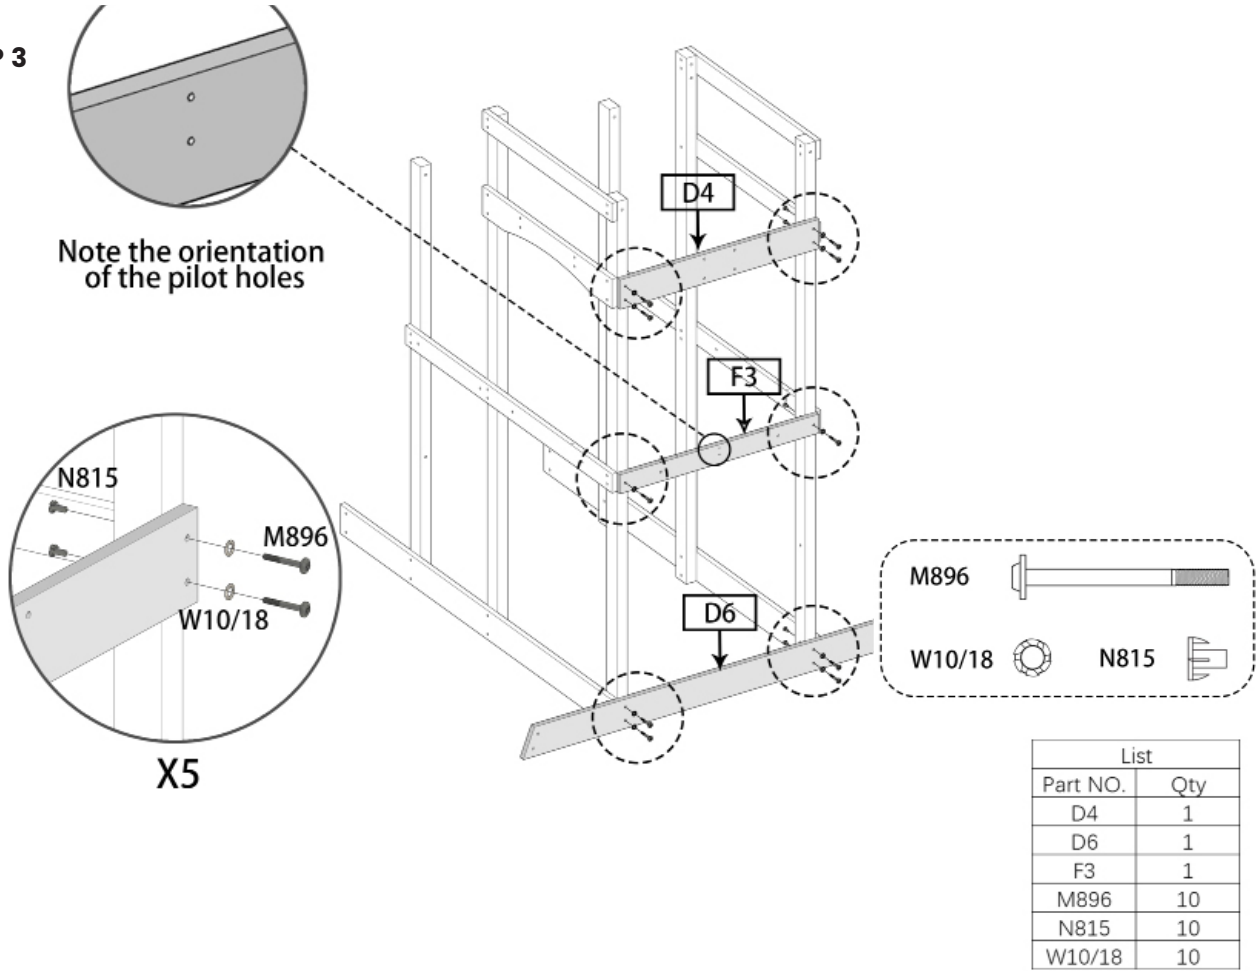


 
STEP 4

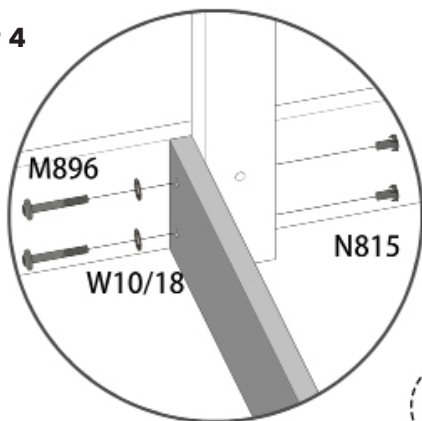

X4


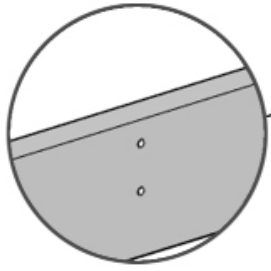 


Note the orientation of the pilot holes

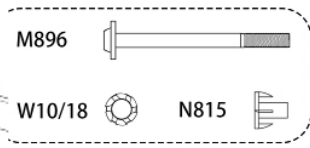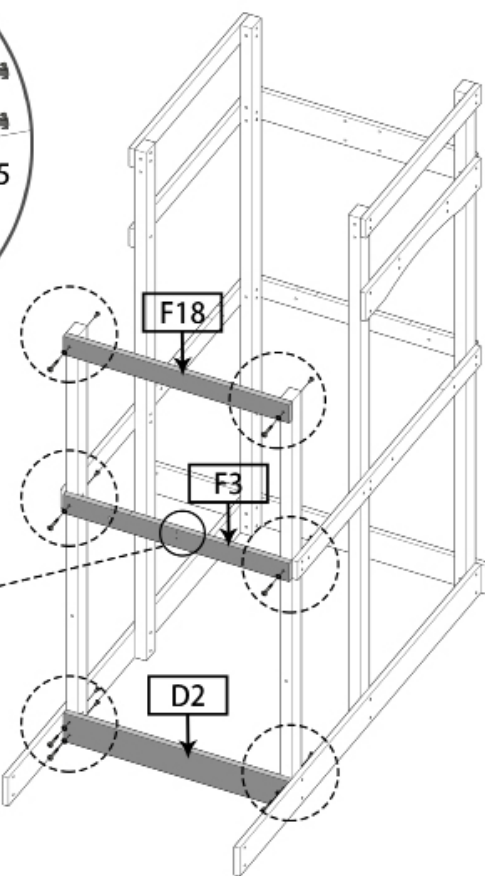  

List	
Part NO.	Qty
D2	1
F3	1
F18	1
M896	8
N815	8
W10/18	8

  STEP 5

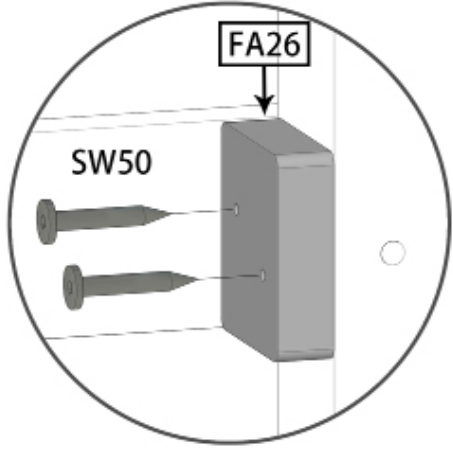
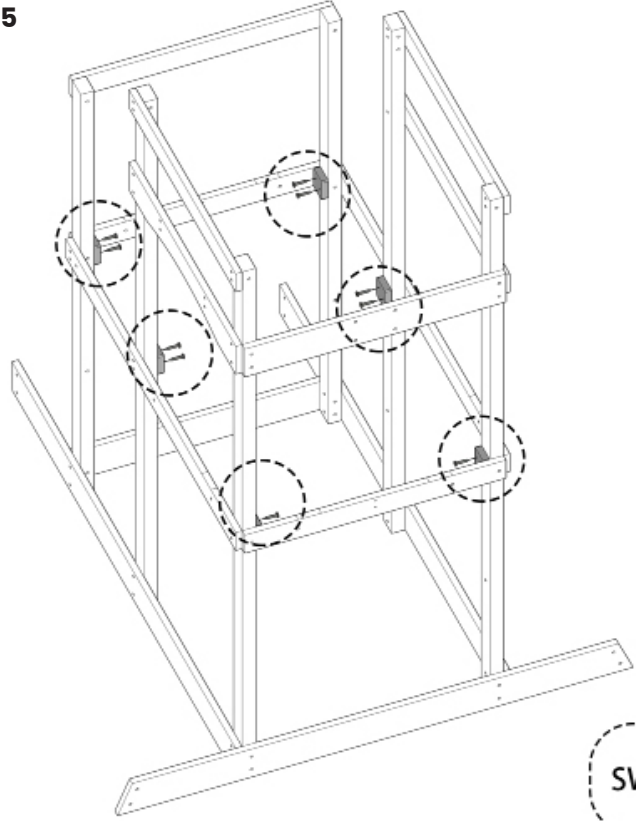


X6





List	
Part NO.	Qty
FA26	6
SW50	12

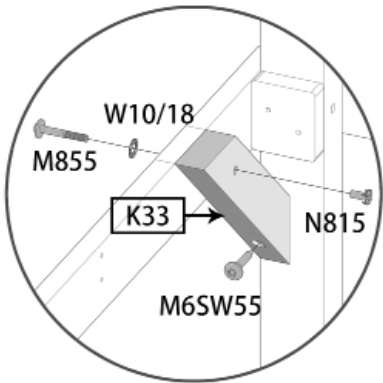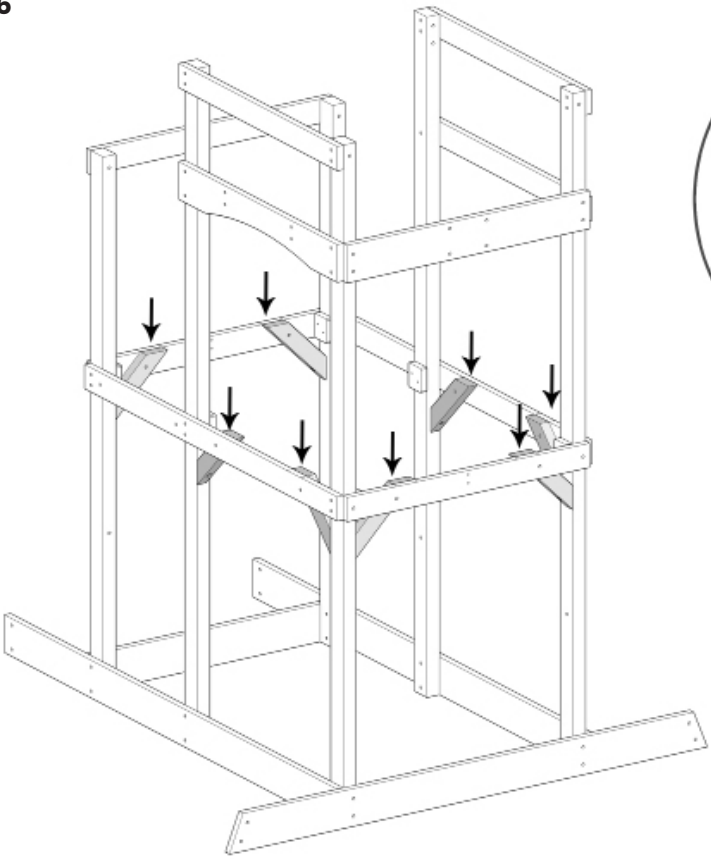  
STEP 6




X8

M6SW55 


 
N815 

M855 


W10/18 

List	
Part NO.	Qty
K33	8
M855	8
N815	8
M6SW55	8
W10/18	8

   
STEP 7

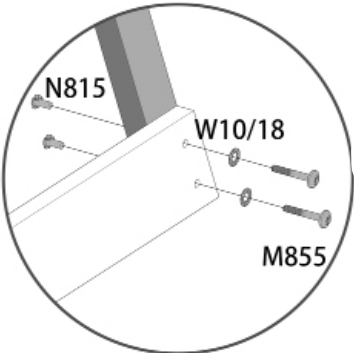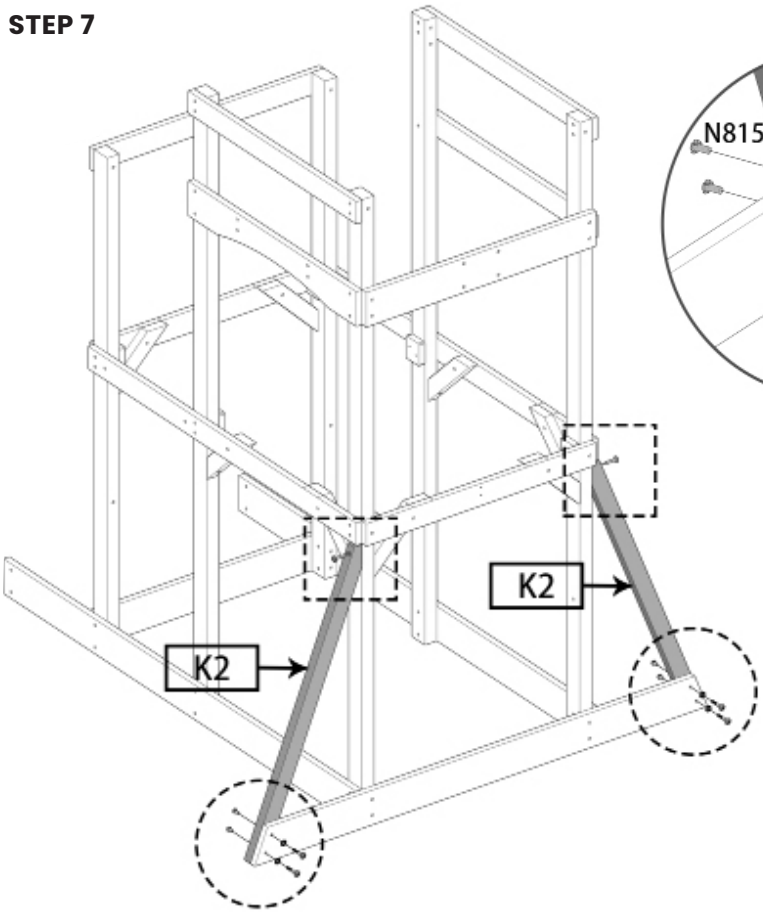

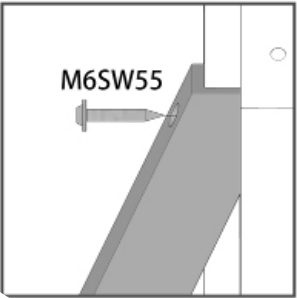

X2




X2

M855 



N815 

M6SW55 

W10/18 

List	
Part NO.	Qty
K2	2
M855	4
N815	4
M6SW55	2
W10/18	4

  STEP 8

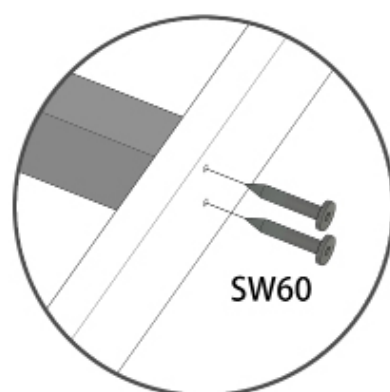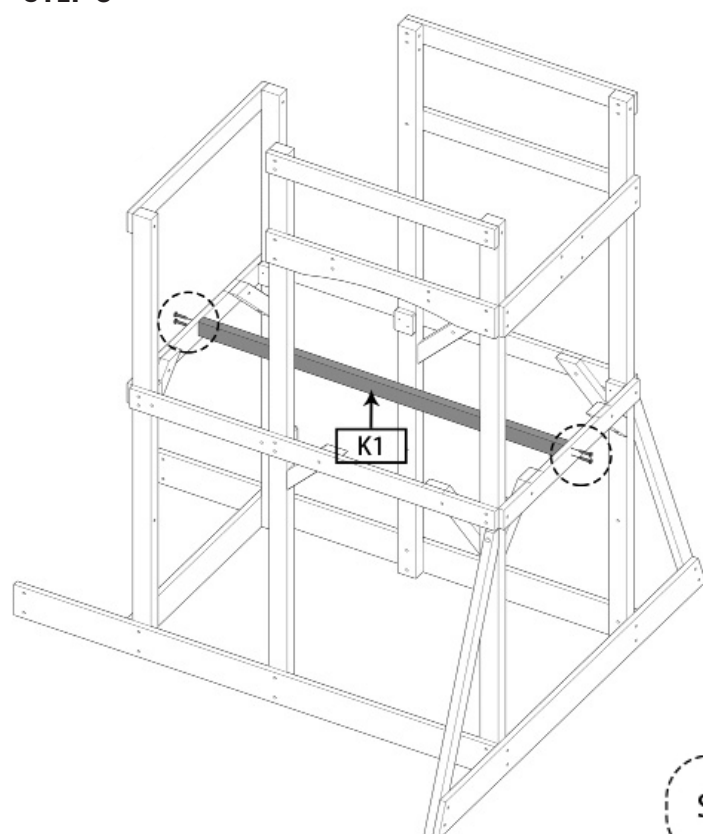



X2

SW60



List	
Part NO.	Qty
K1	1
SW60	4

  STEP 9

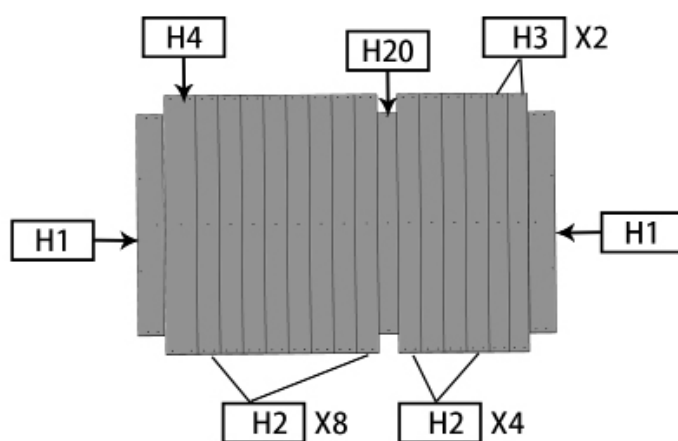
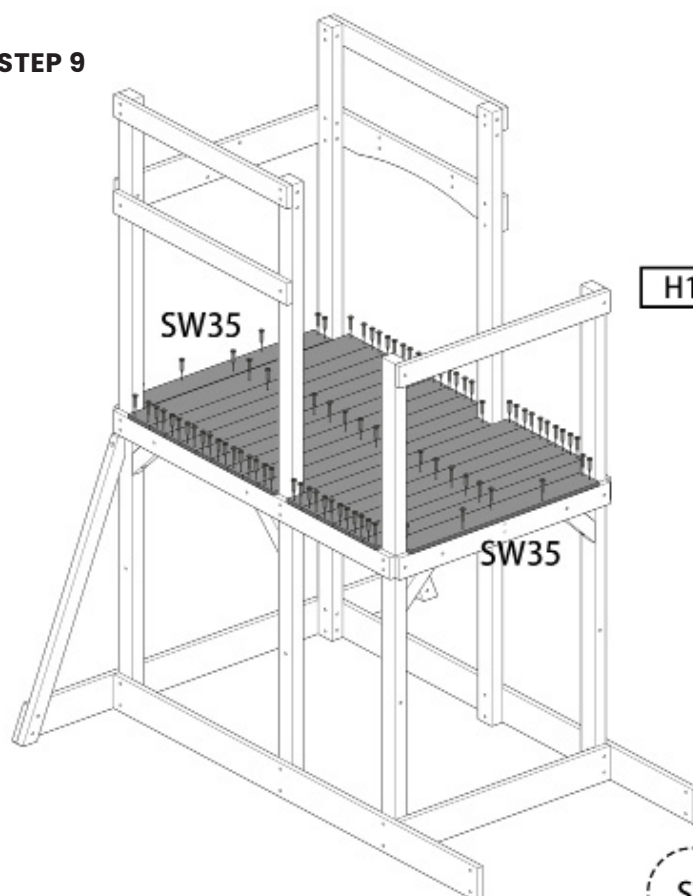


SW35



List	
Part NO.	Qty
H1	2
H2	12
H3	2
H4	1
H20	1
SW35	92

  
STEP 10

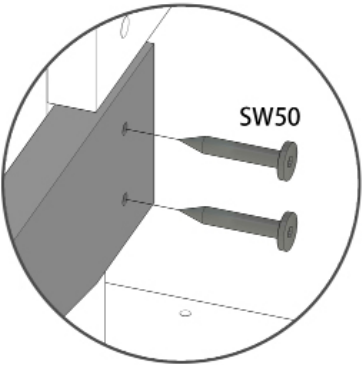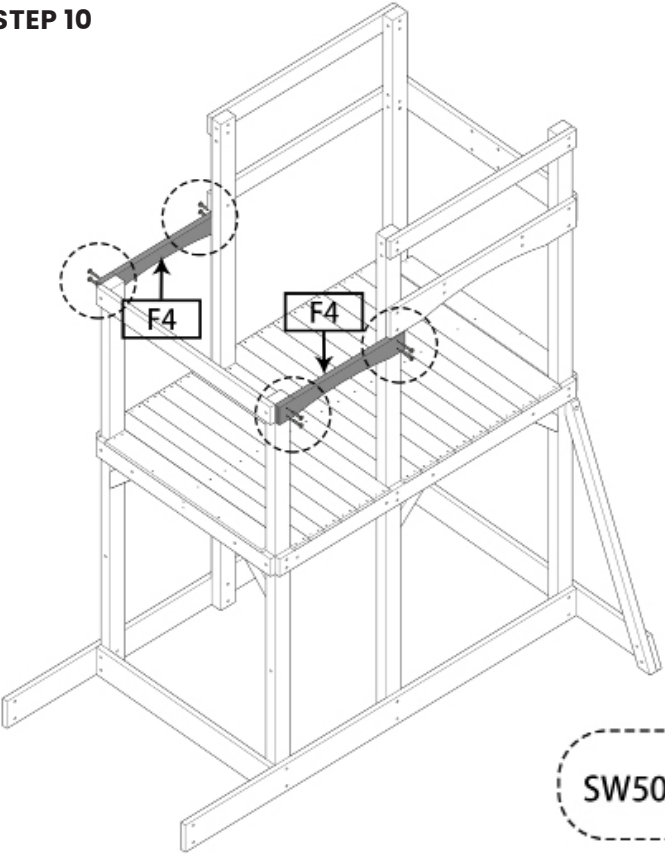



X4



List	
Part NO.	Qty
F4	2
SW50	8

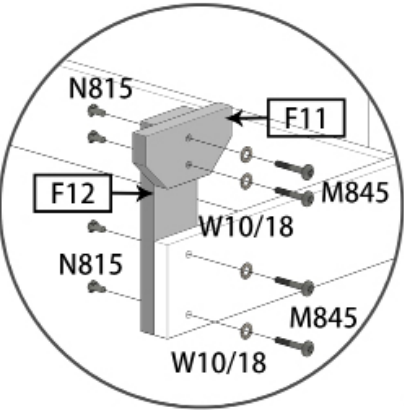 



X2

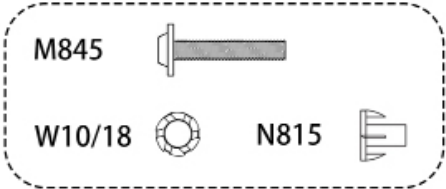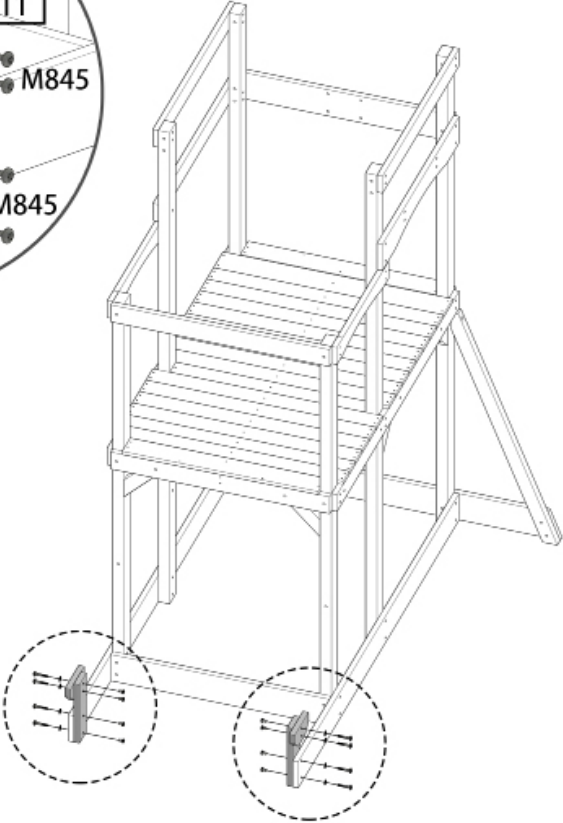  

List	
Part NO.	Qty
F11	2
F12	2
M845	8
N815	8
W10/18	8

STEP 11

  STEP 12

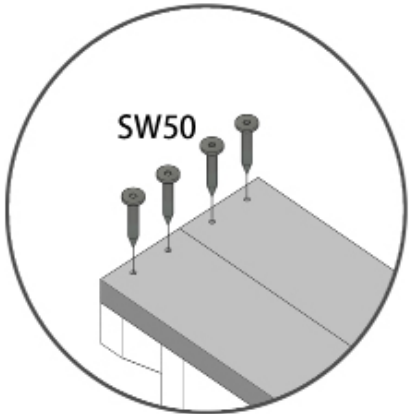
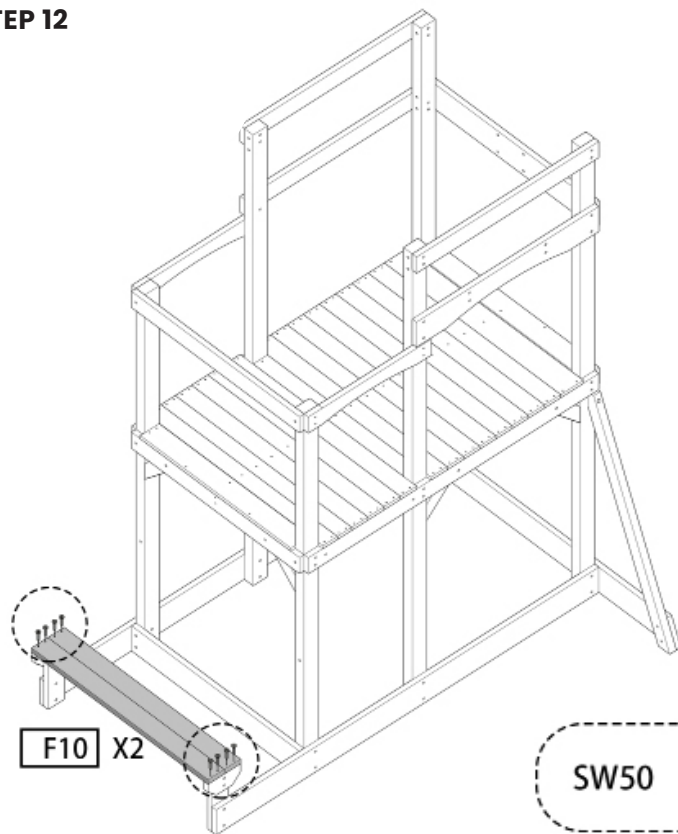


X2




List	
Part NO.	Qty
F10	2
SW50	8

  STEP 13

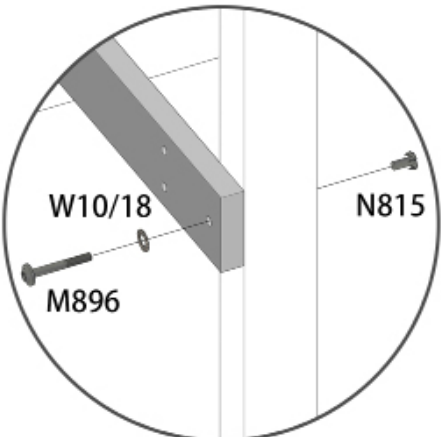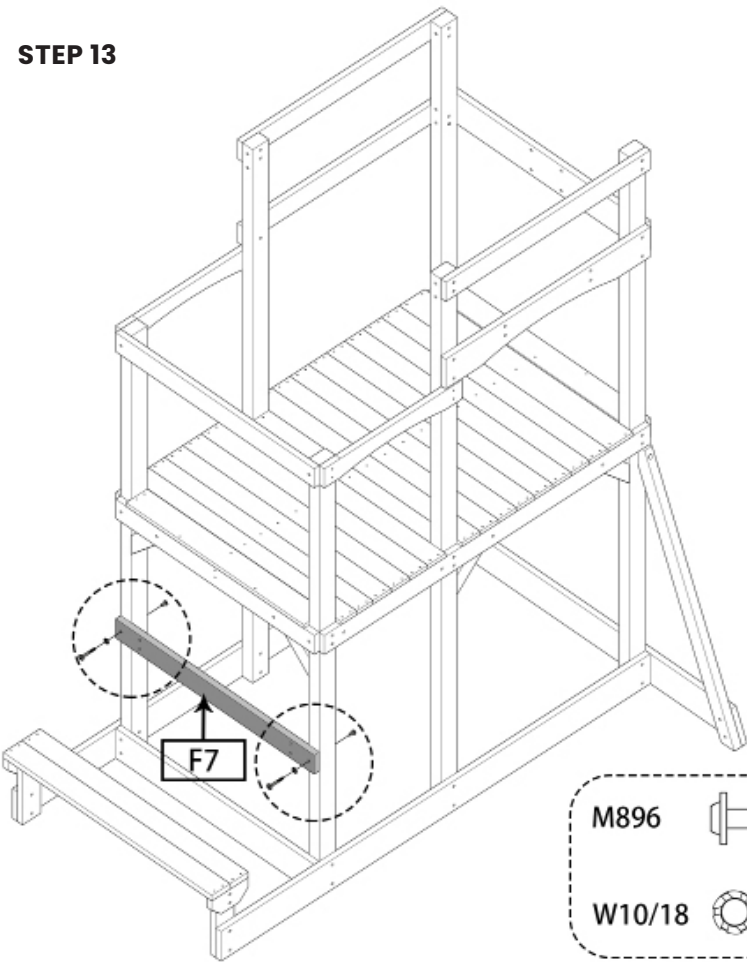


X2

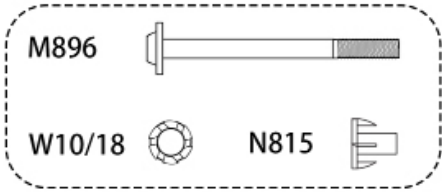 


List	
Part NO.	Qty
F7	1
M896	2
N815	2
W10/18	2

 STEP 14


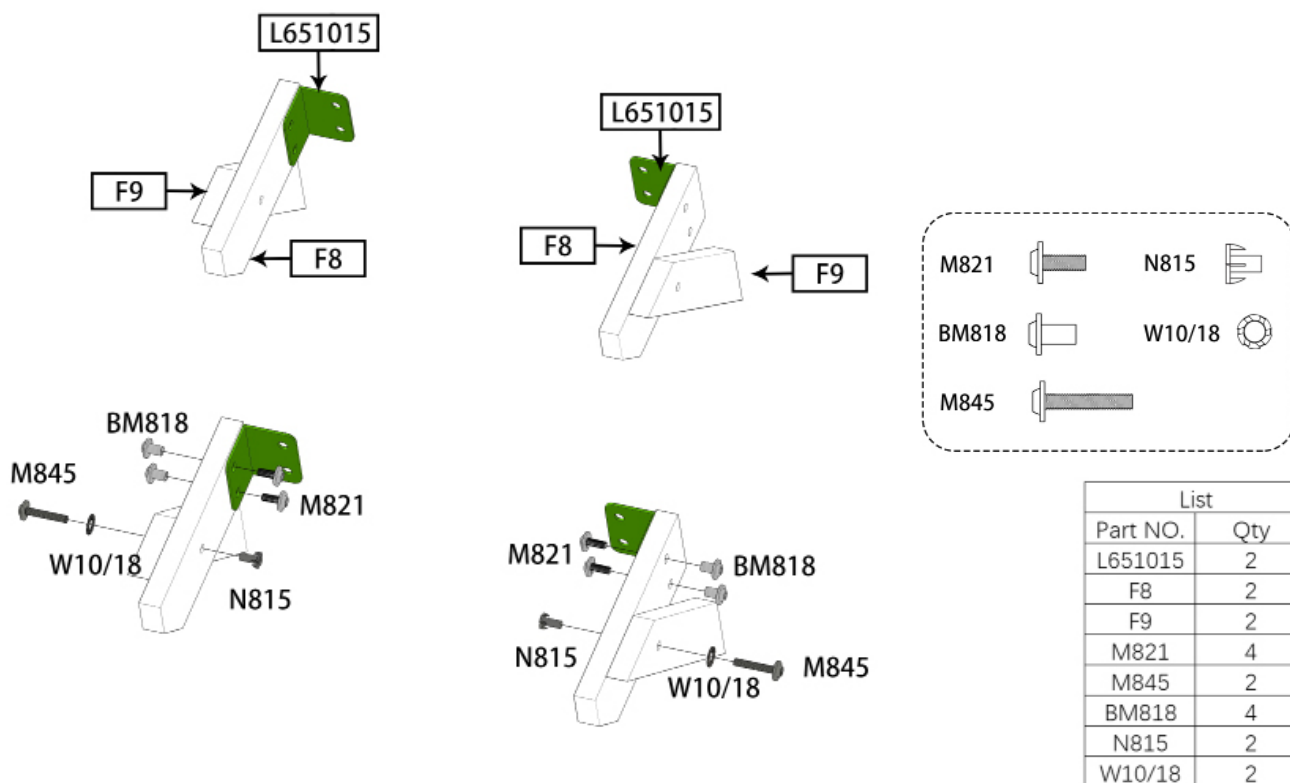


 STEP 15

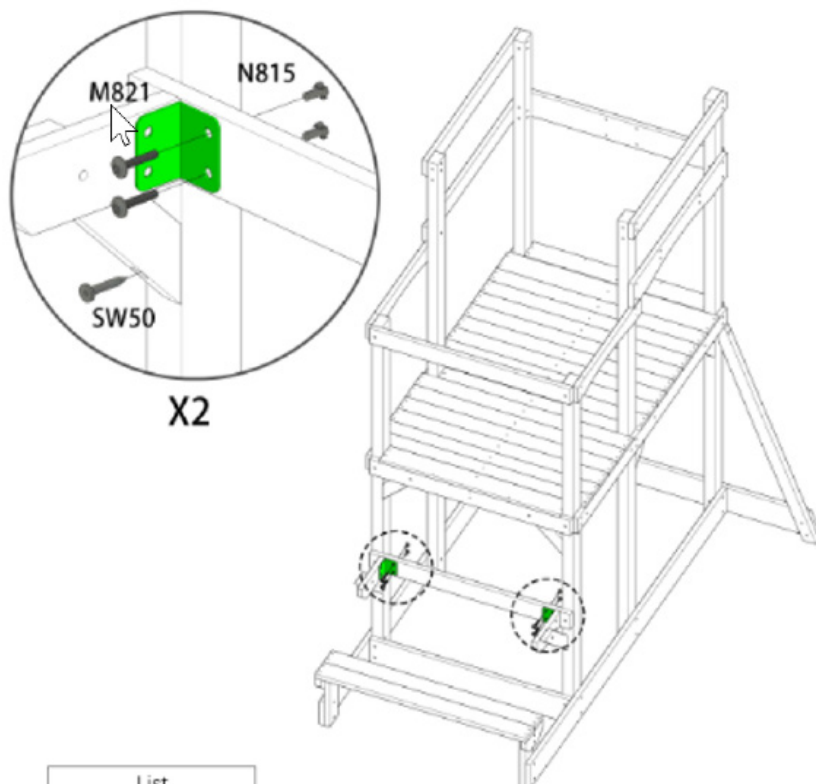




List	
Part NO.	Qty
M821	4
N815	4
SW50	2

  STEP 16

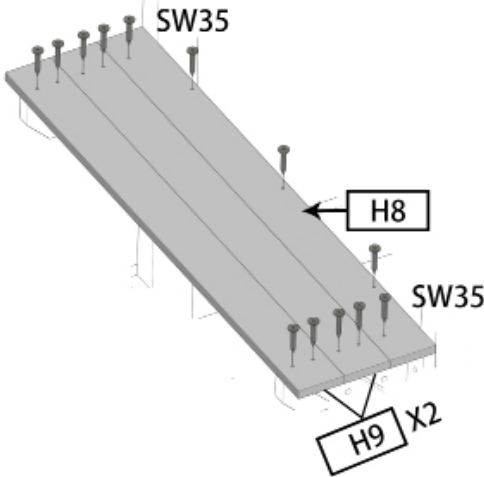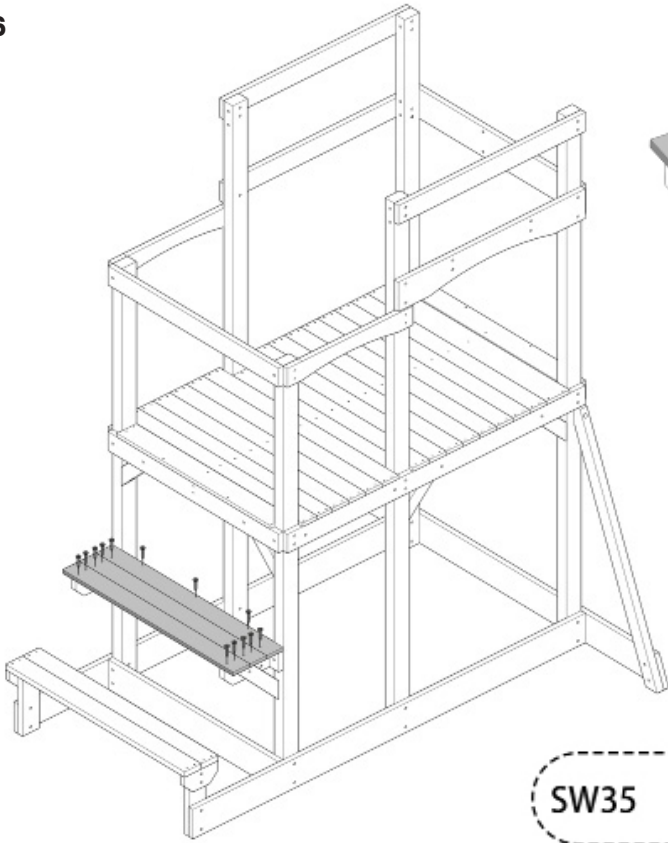



List	
Part NO.	Qty
H8	1
H9	2
SW35	13

   STEP 17

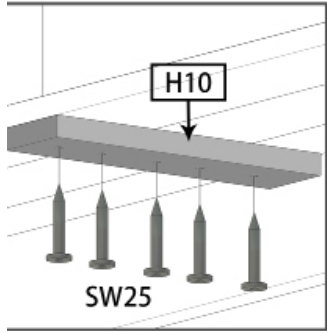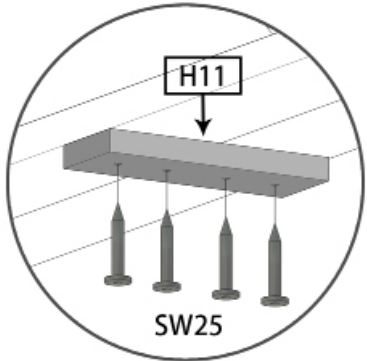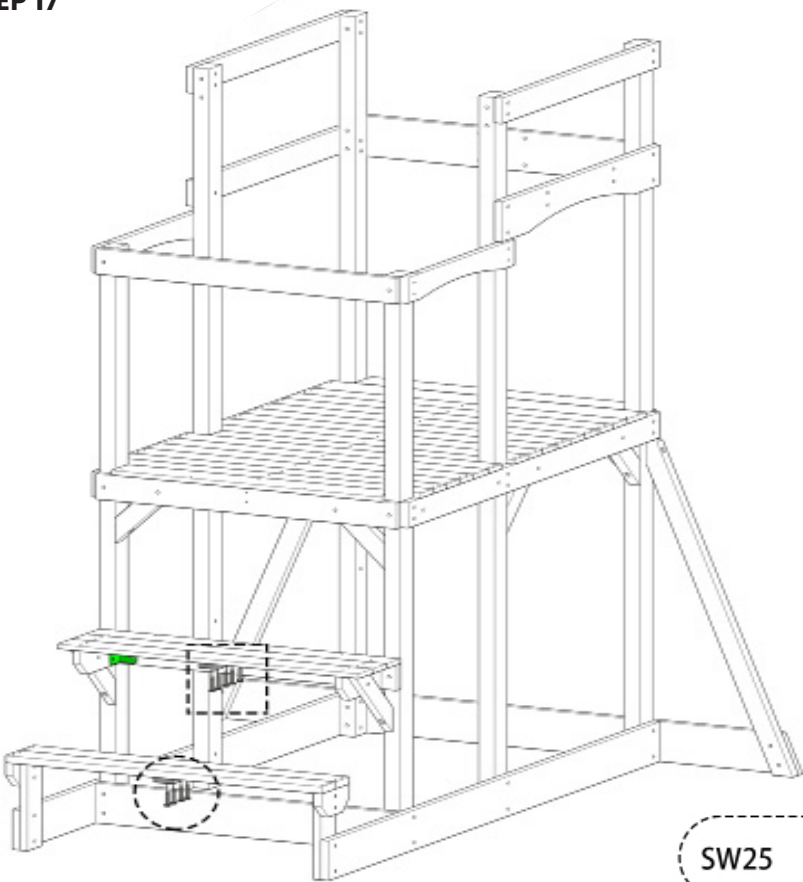

List	
Part NO.	Qty
H10	1
H11	1
SW25	9

  STEP 18

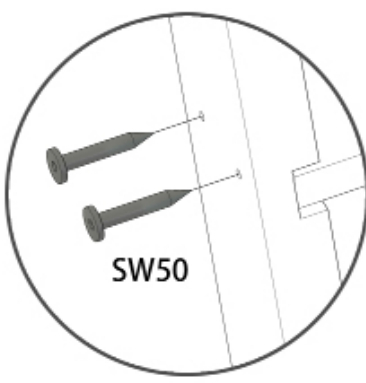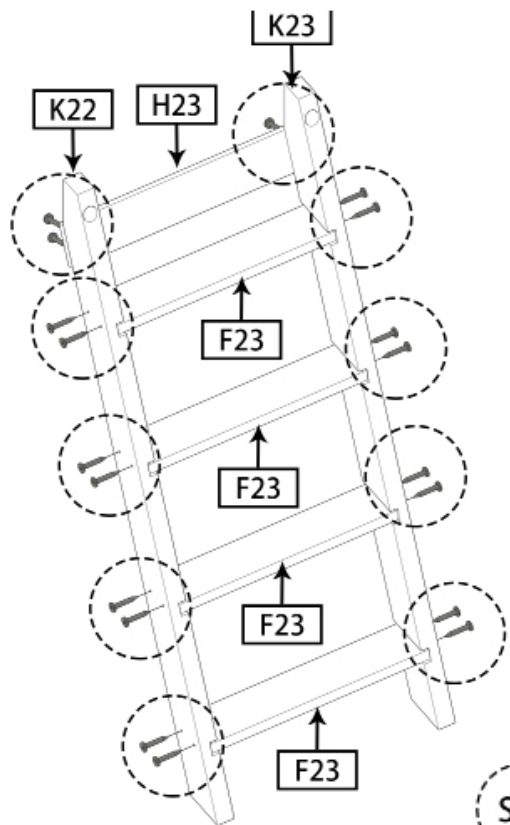

SW50



X10

SW50



List	
Part NO.	Qty
F23	4
H23	1
K22	1
K23	1
SW50	20

  STEP 19

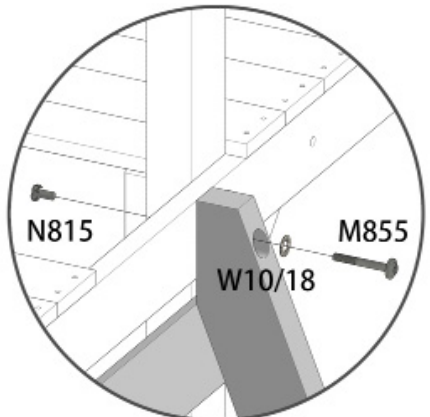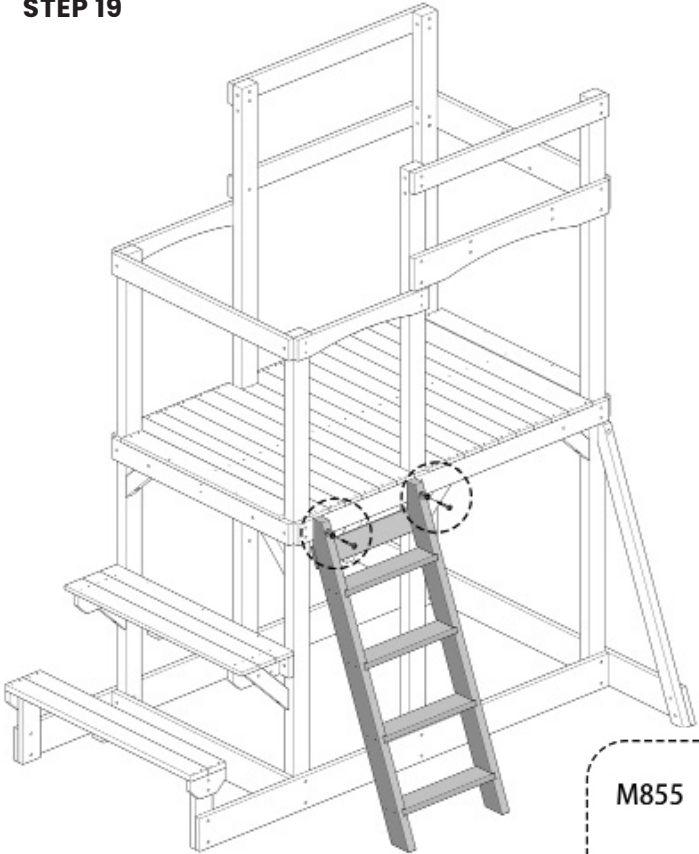

N815

W10/18

M855

X2

M855



W10/18





N815



List	
Part NO.	Qty
M855	2
N815	2
W10/18	2

  STEP 20

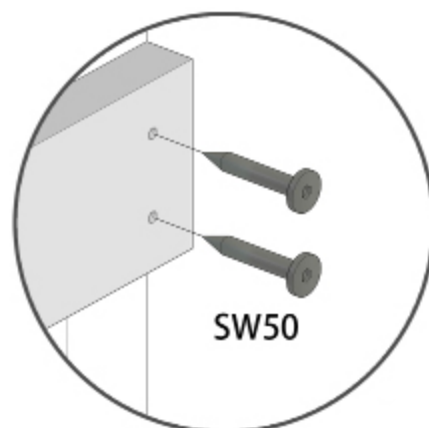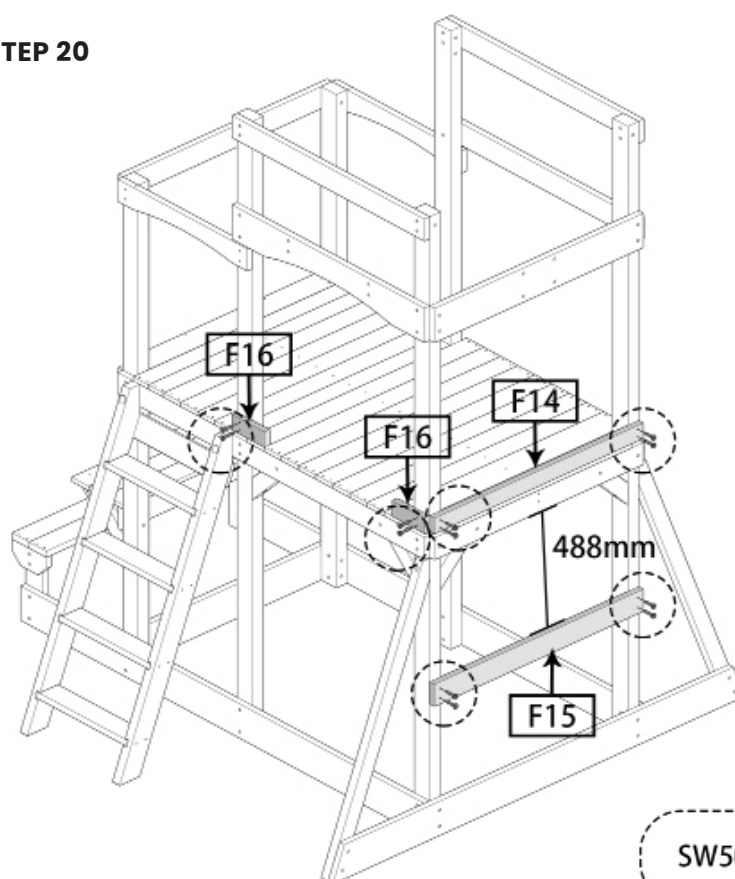

SW50



X6

SW50



List	
Part NO.	Qty
F14	1
F15	1
F16	2
SW50	12

  STEP 21

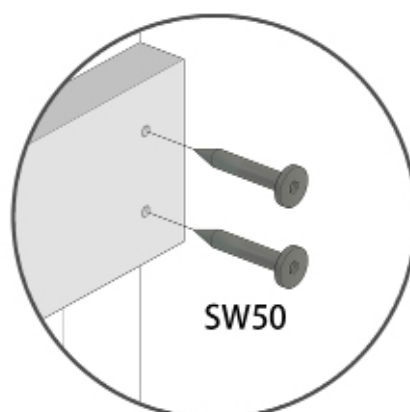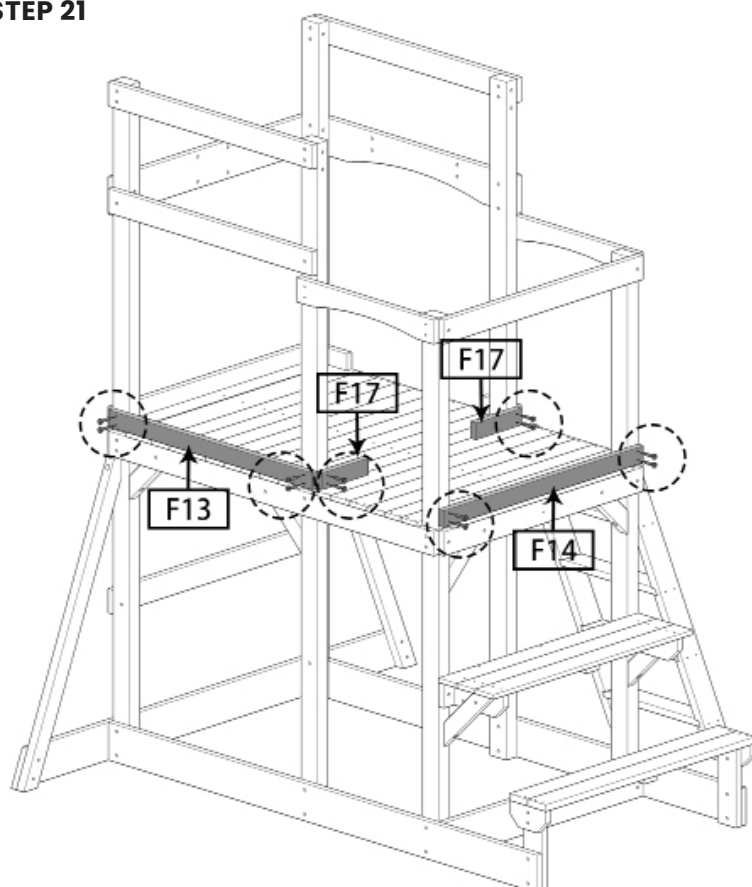

SW50



X6

SW50





List	
Part NO.	Qty
F13	1
F14	1
F17	2
SW50	12

  STEP 22

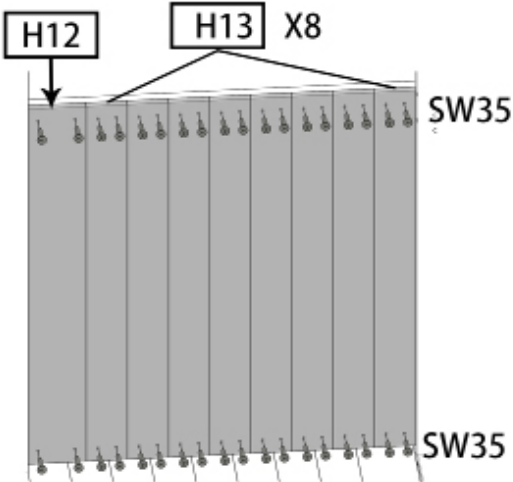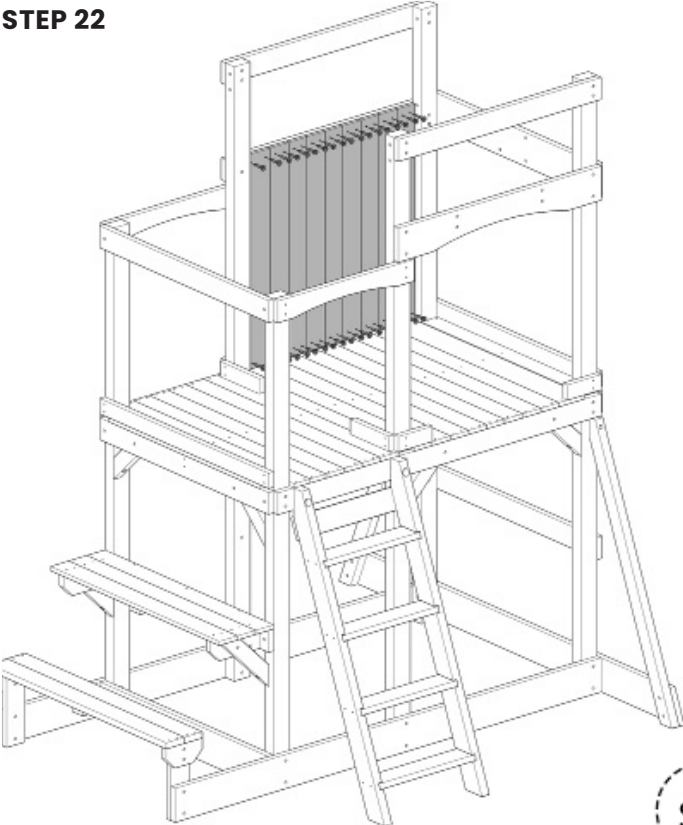

List	
Part NO.	Qty
H12	1
H13	8
SW35	36

  STEP 23

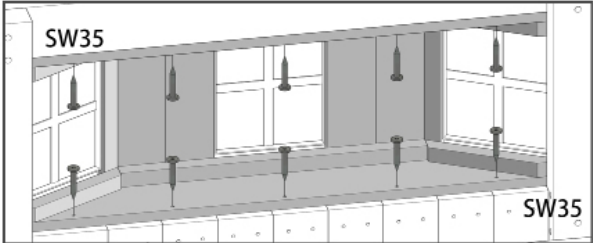
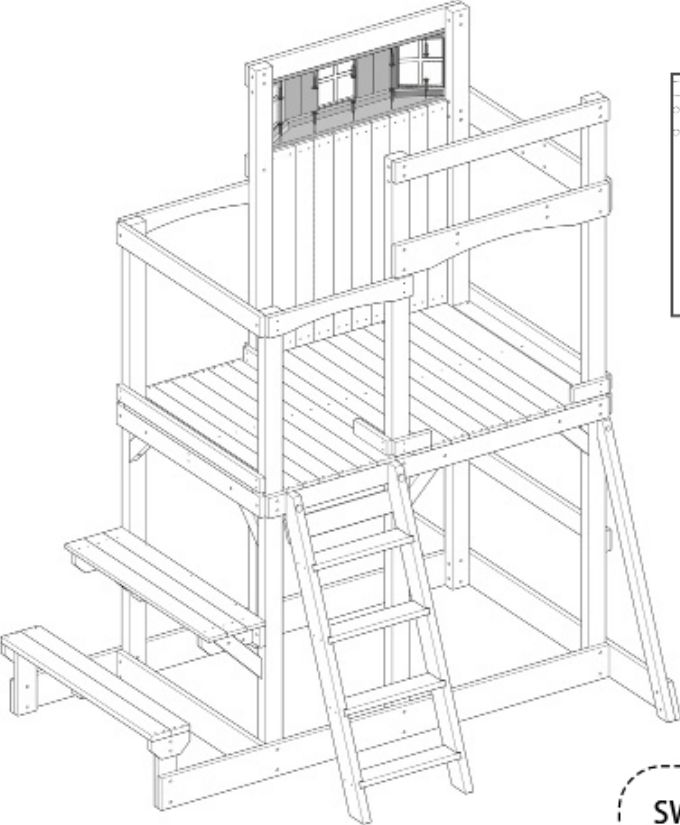


SILL



List	
Part NO.	Qty
SW35	10
SILL	1

  STEP 24

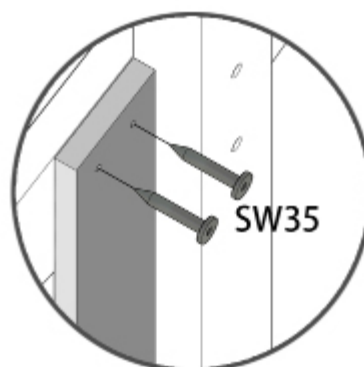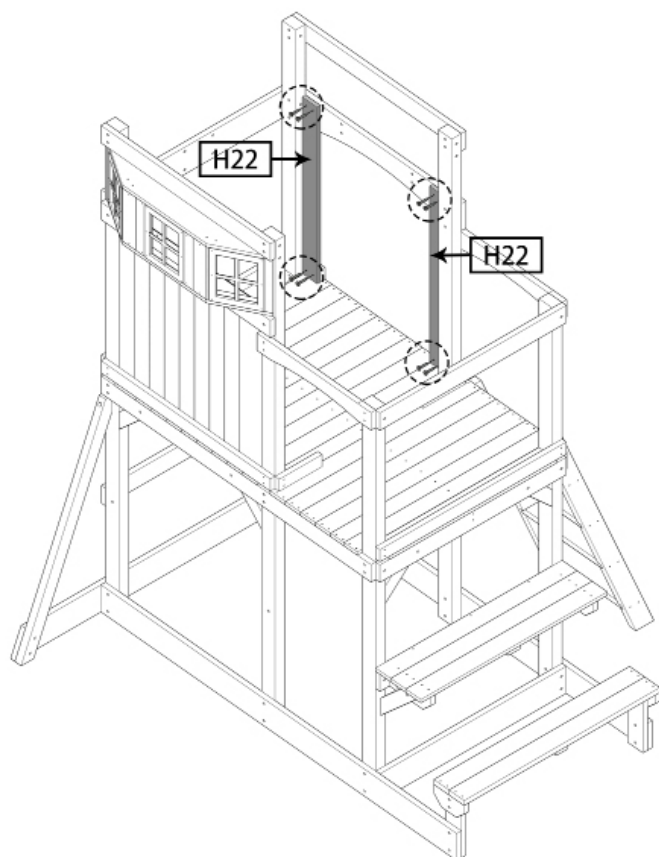

X4



SW35




List

Part NO.	Qty
H22	2
SW35	8

  STEP 25

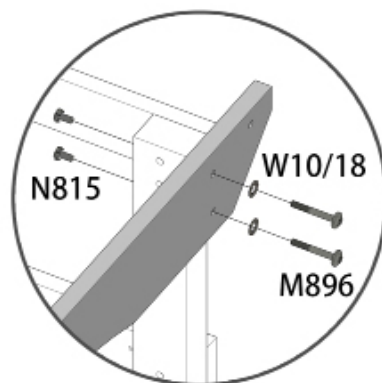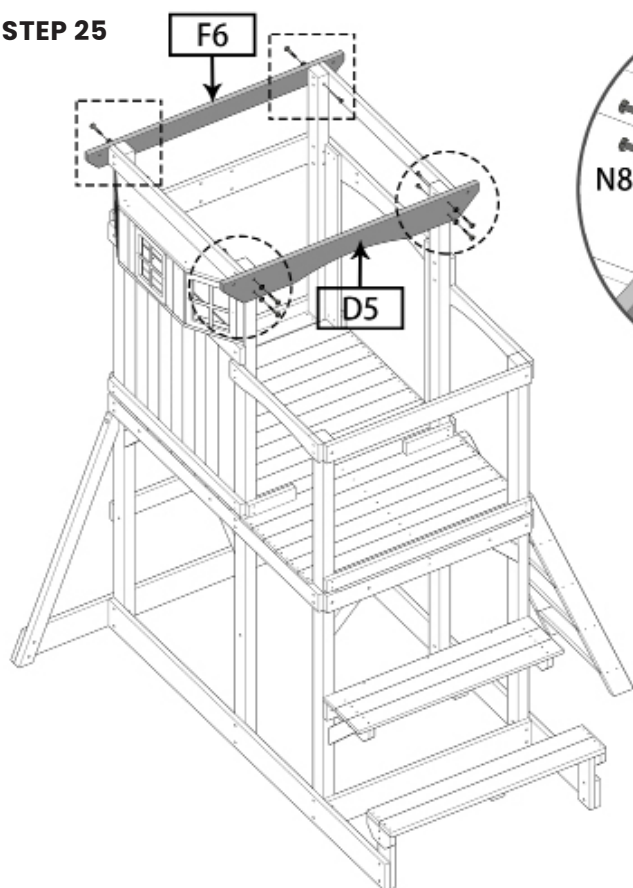


X2

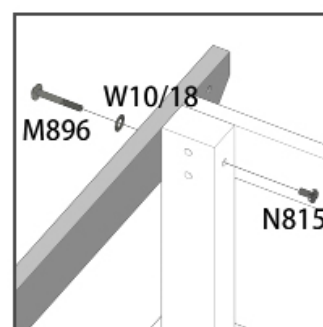 

X2

 M896



W10/18





N815



List

Part NO.	Qty
D5	1
F6	1
M896	6
N815	6
W10/18	6

  STEP 26

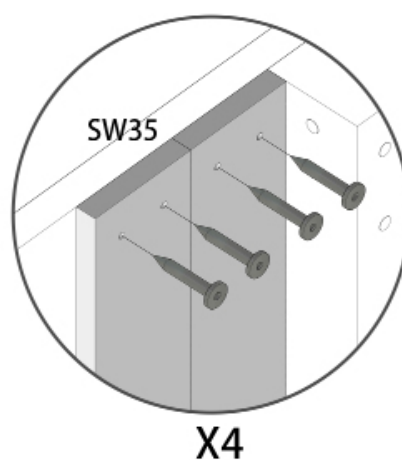
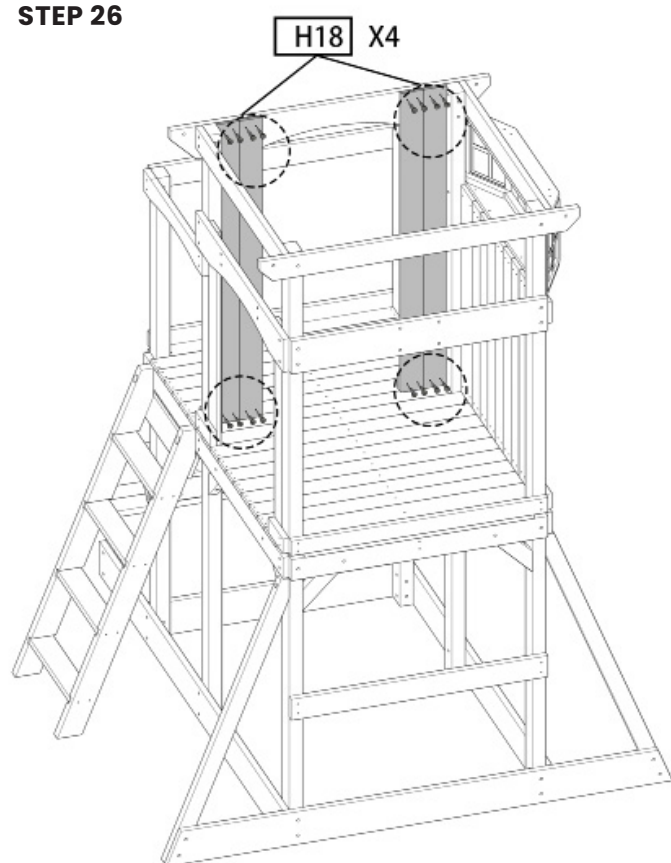


SW35



List	
Part NO.	Qty
H18	4
SW35	16

  STEP 27

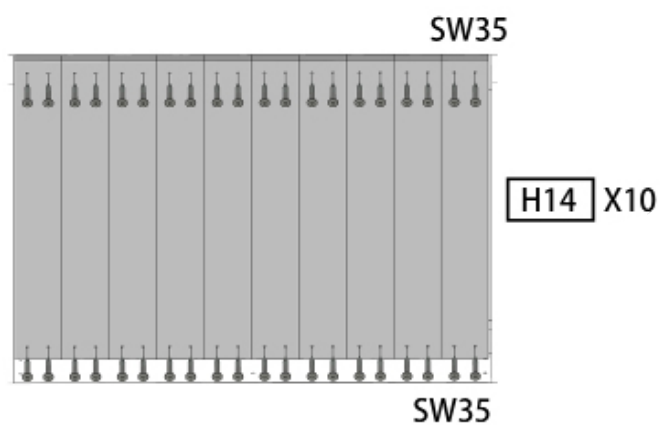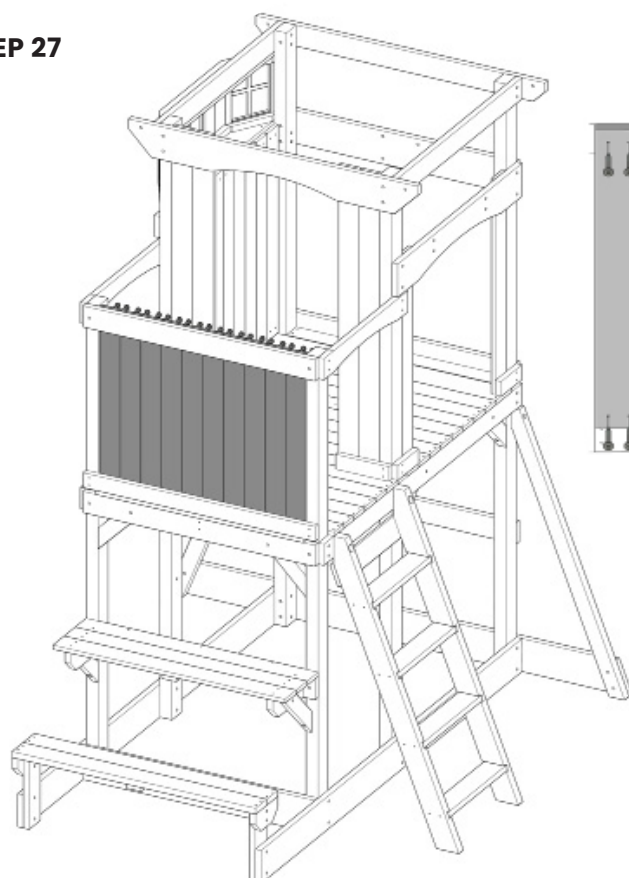


SW35




List	
Part NO.	Qty
H14	10
SW35	40


 
STEP 28

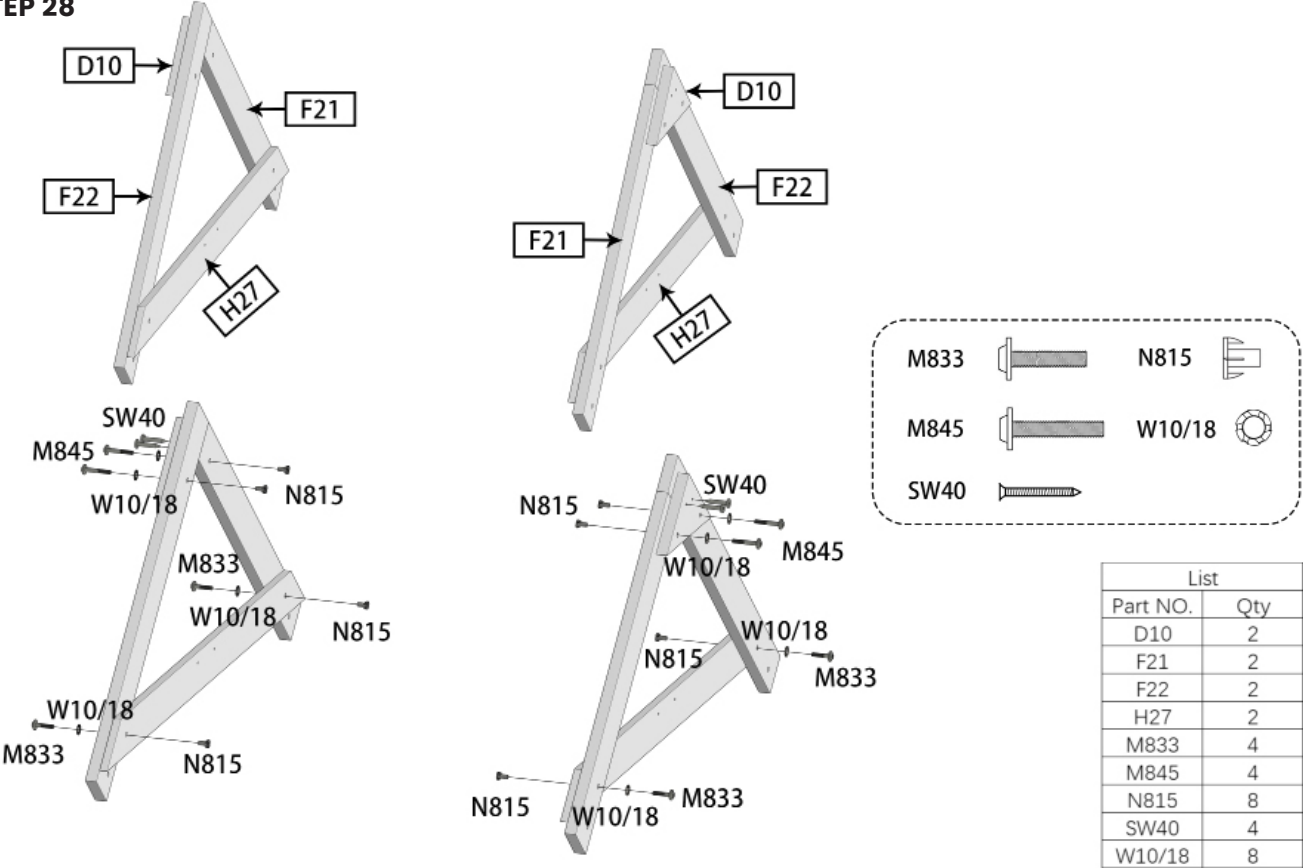

 
STEP 29

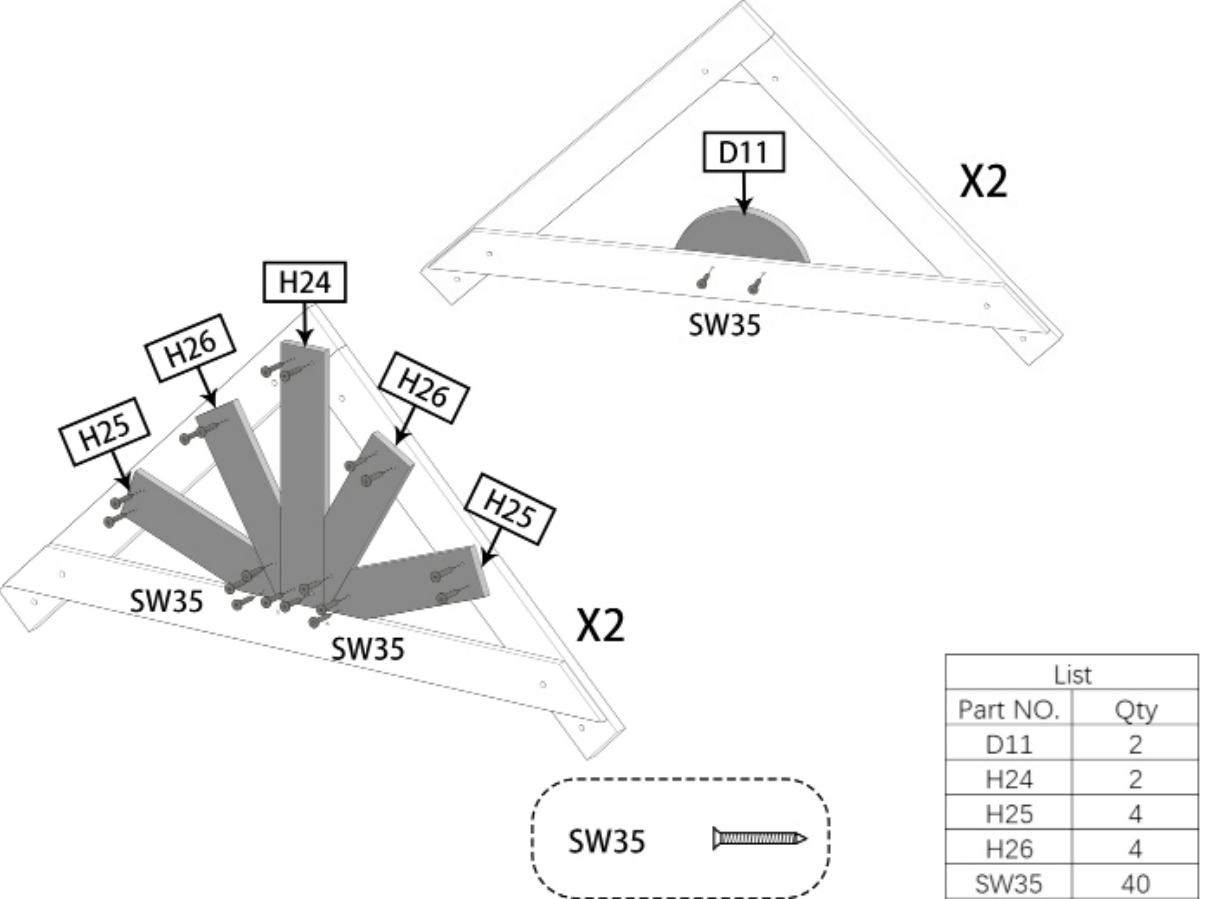

  STEP 30

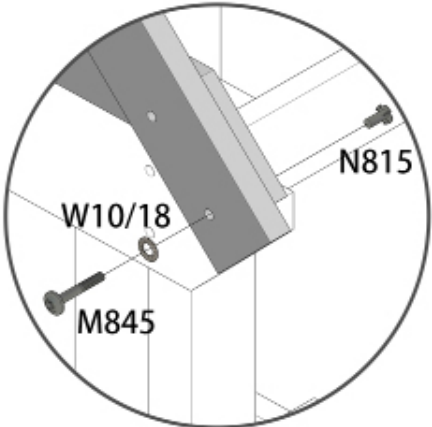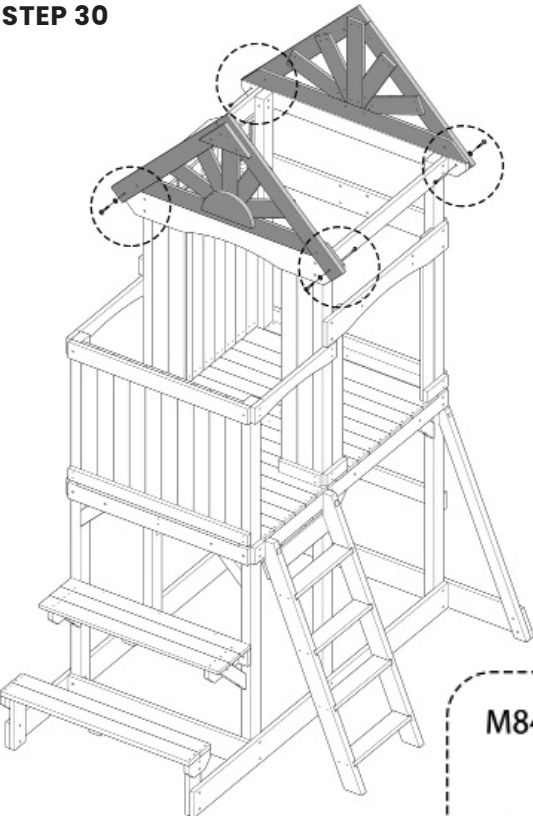


X4

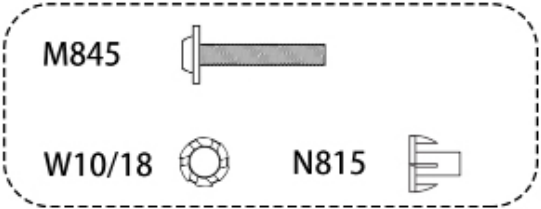 


List	
Part NO.	Qty
M845	4
N815	4
W10/18	4

 STEP 31

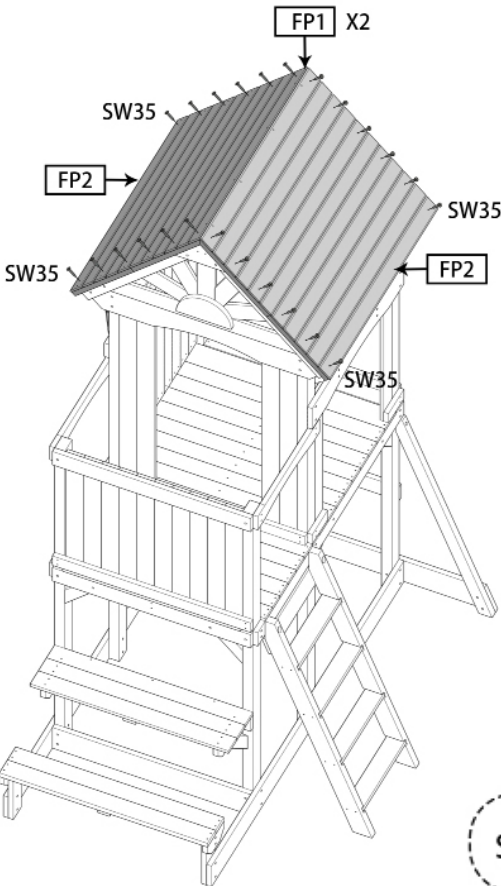

List	
Part NO.	Qty
FP1	2
FP2	2
SW35	24

 
STEP 32

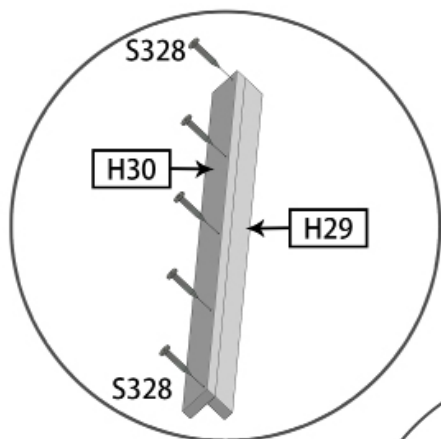


S321 

S328 


List	
Part NO.	Qty
H29	1
H30	1
S321	8
S328	5

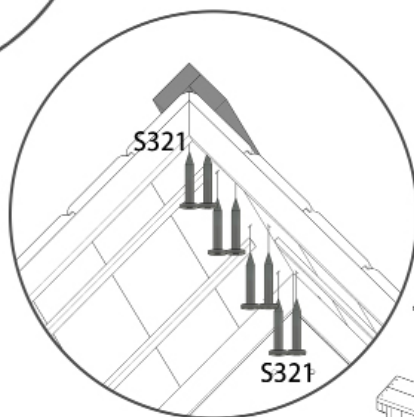 


Screws lock from the bottom of the roof

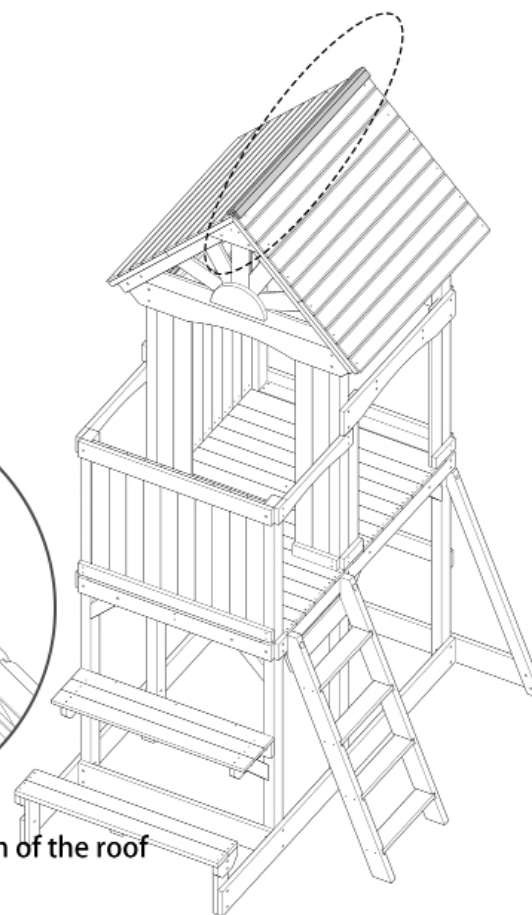 

 
STEP 33

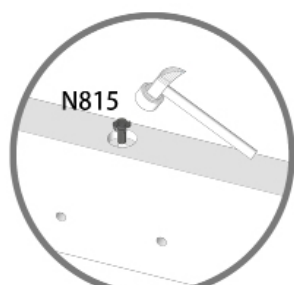


Insert the N815 into the beam by hammer

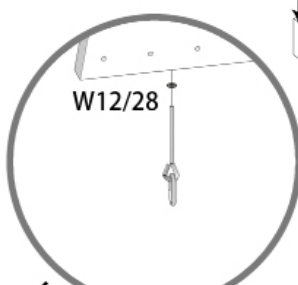 

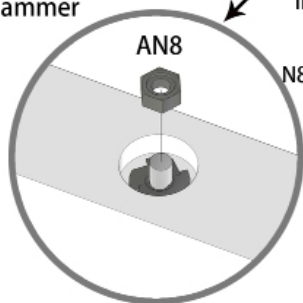 

 Insert the swing hanger into the beam and fix them with nuts N815 as tightly as possible

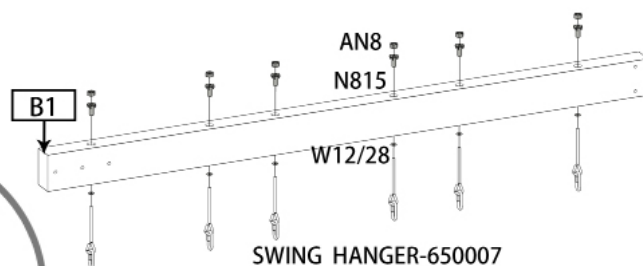


Fix the AN8 as tightly as possible




AN8 

W12/28 


N815 

List	
Part NO.	Qty
B1	1
650007	6
N815	6
AN8	6
W12/18	6

 
STEP 34

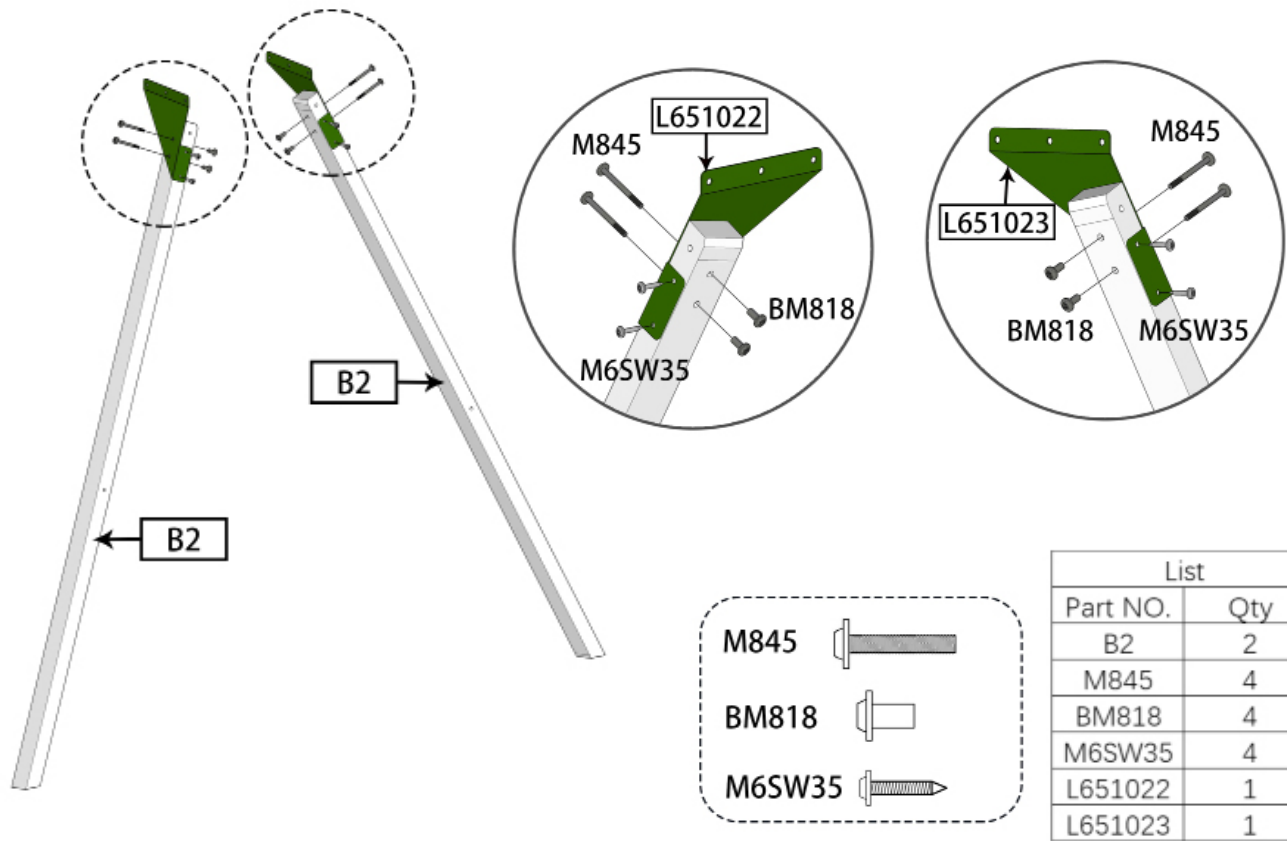

 
STEP 35

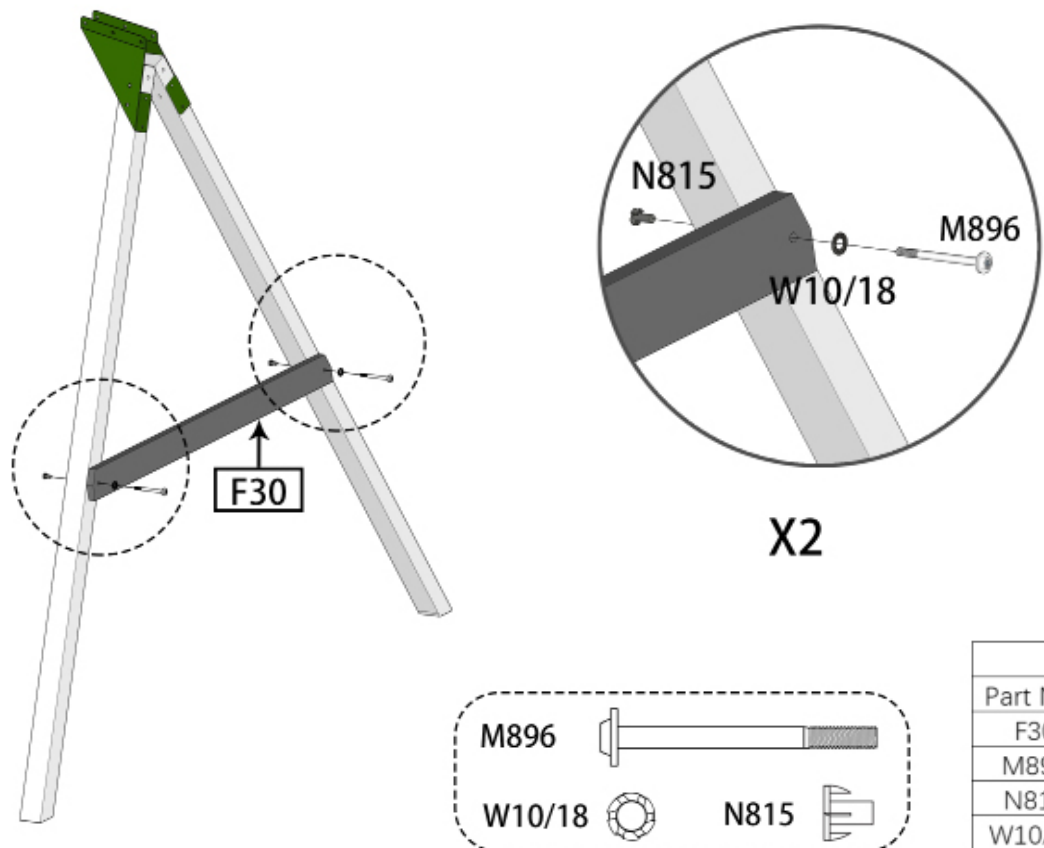

 STEP 36


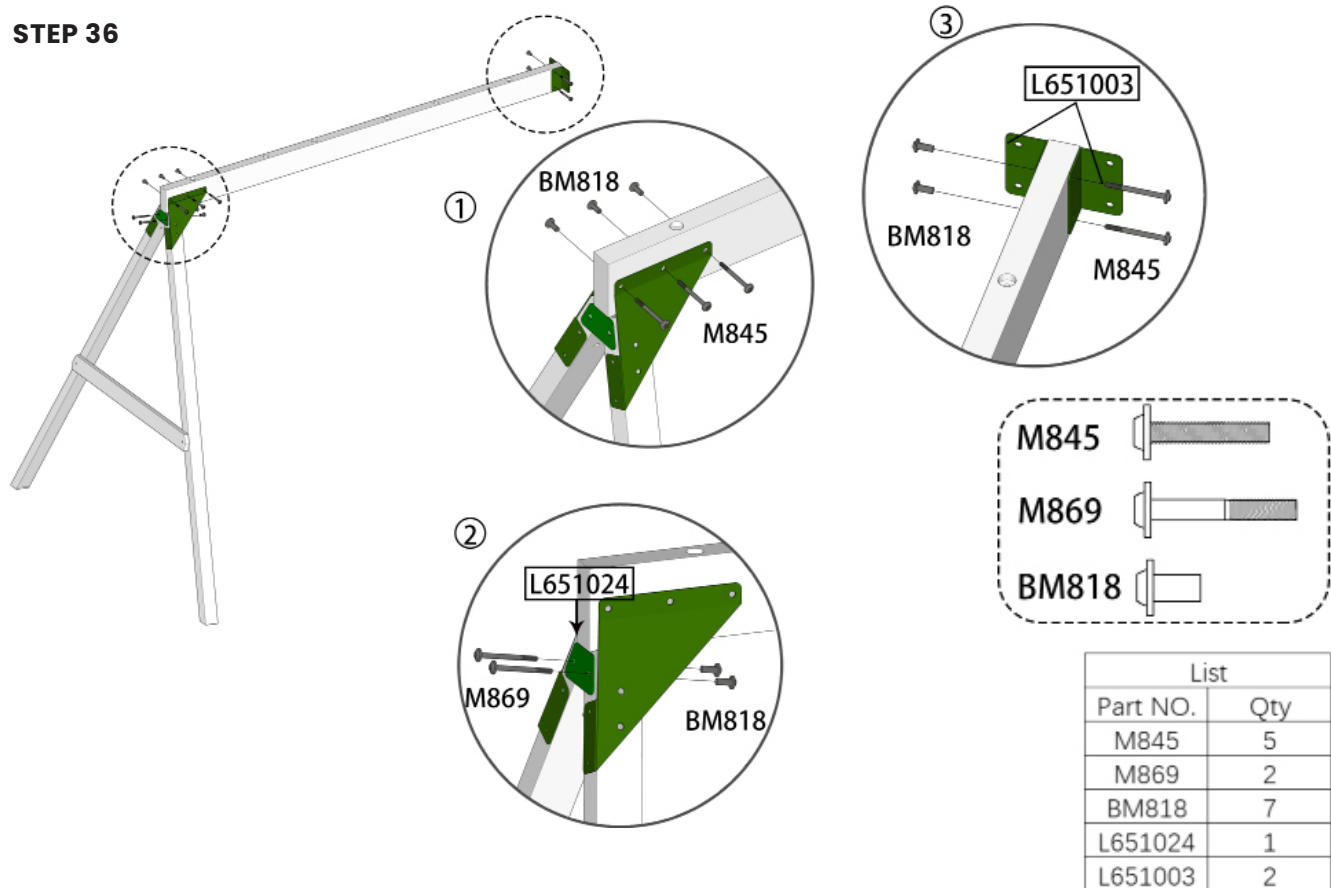


 STEP 37

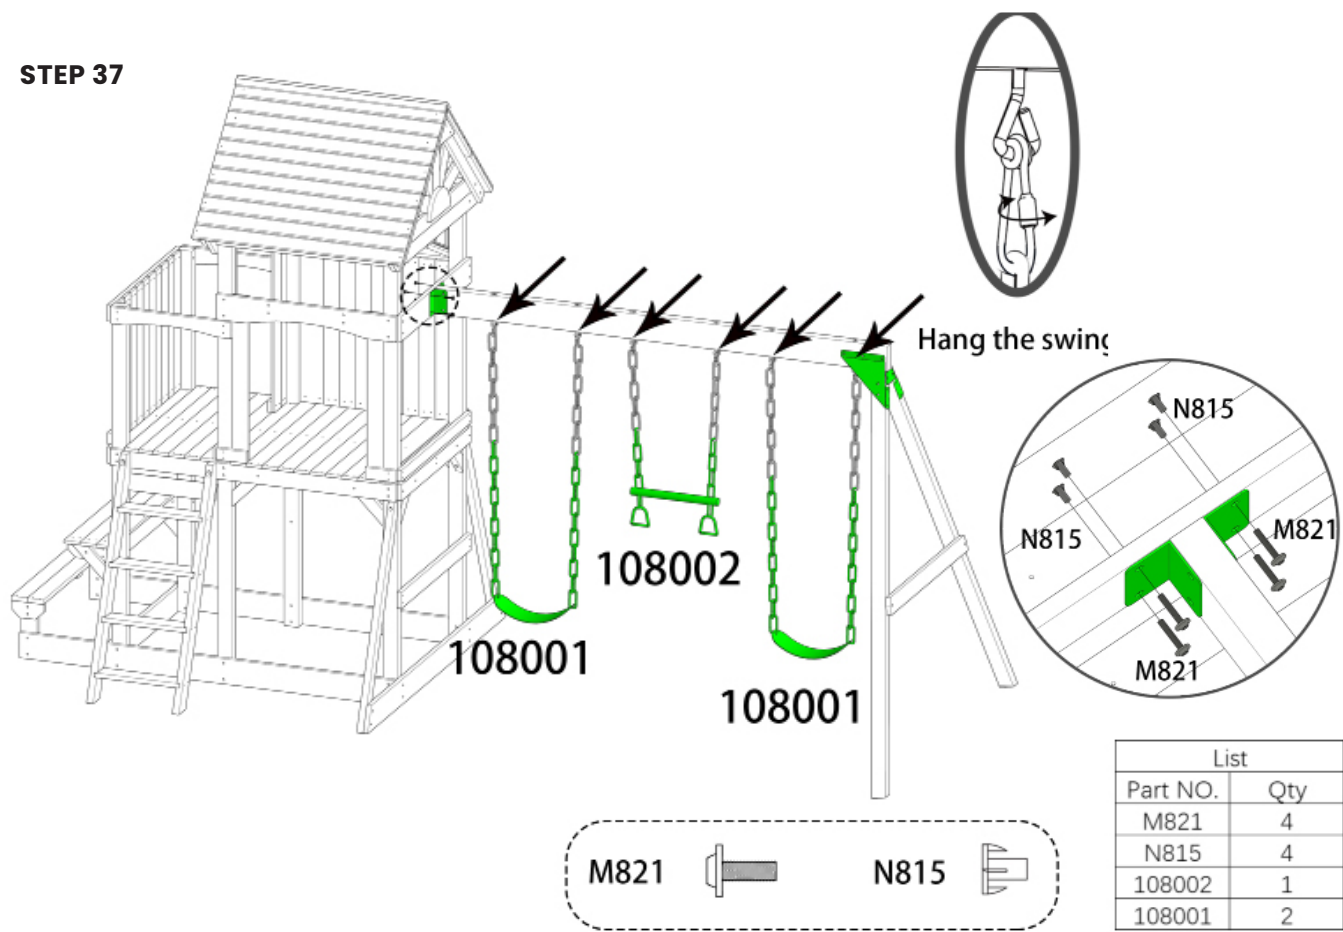


STEP 38


List	
Part NO.	Qty
H17	4
H18	6
H28	4
SW35	48

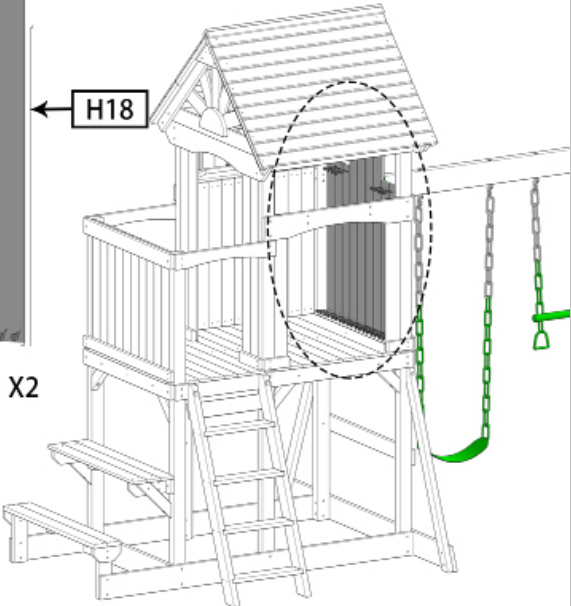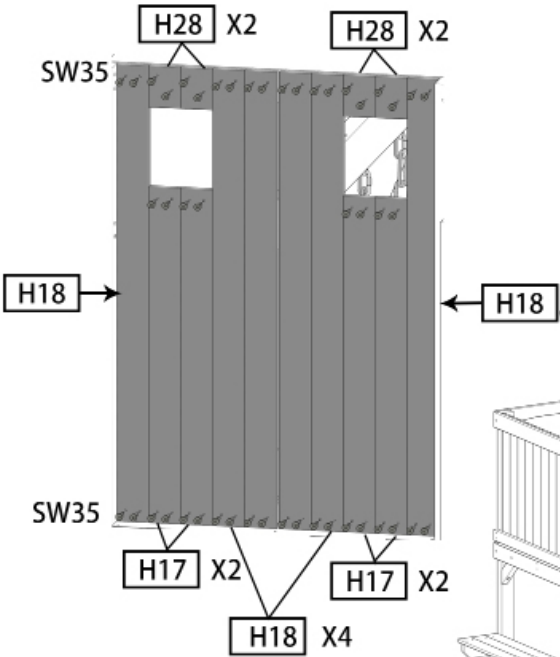  

 
STEP 39

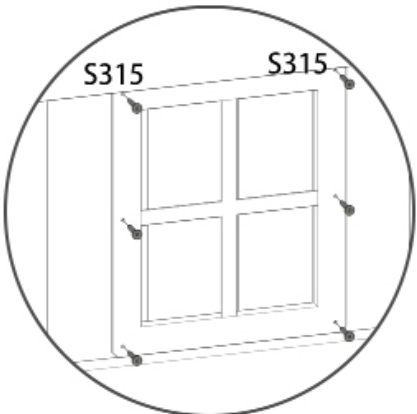


650051 X2

 


List	
Part NO.	Qty
S315	12
650051	2

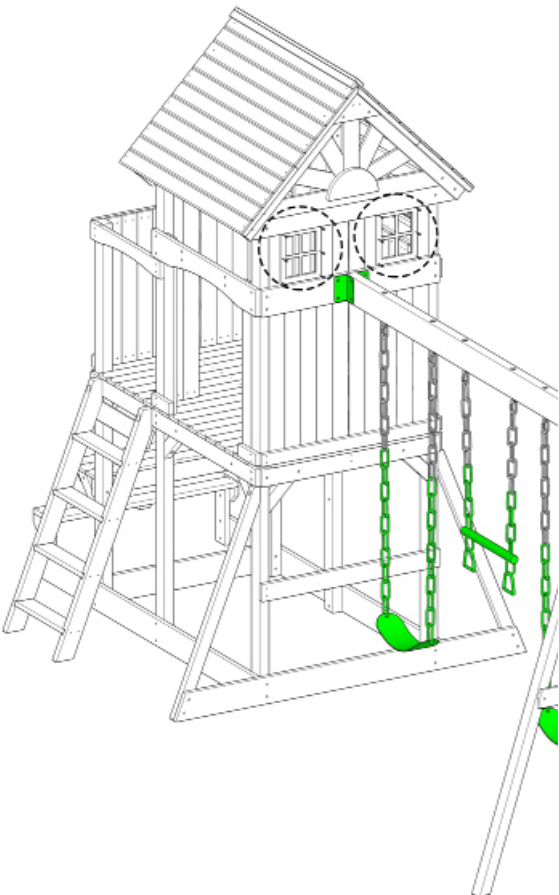 

 STEP 40

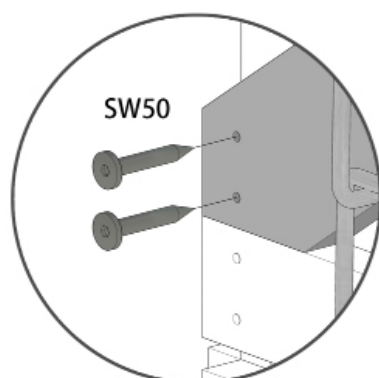

X2

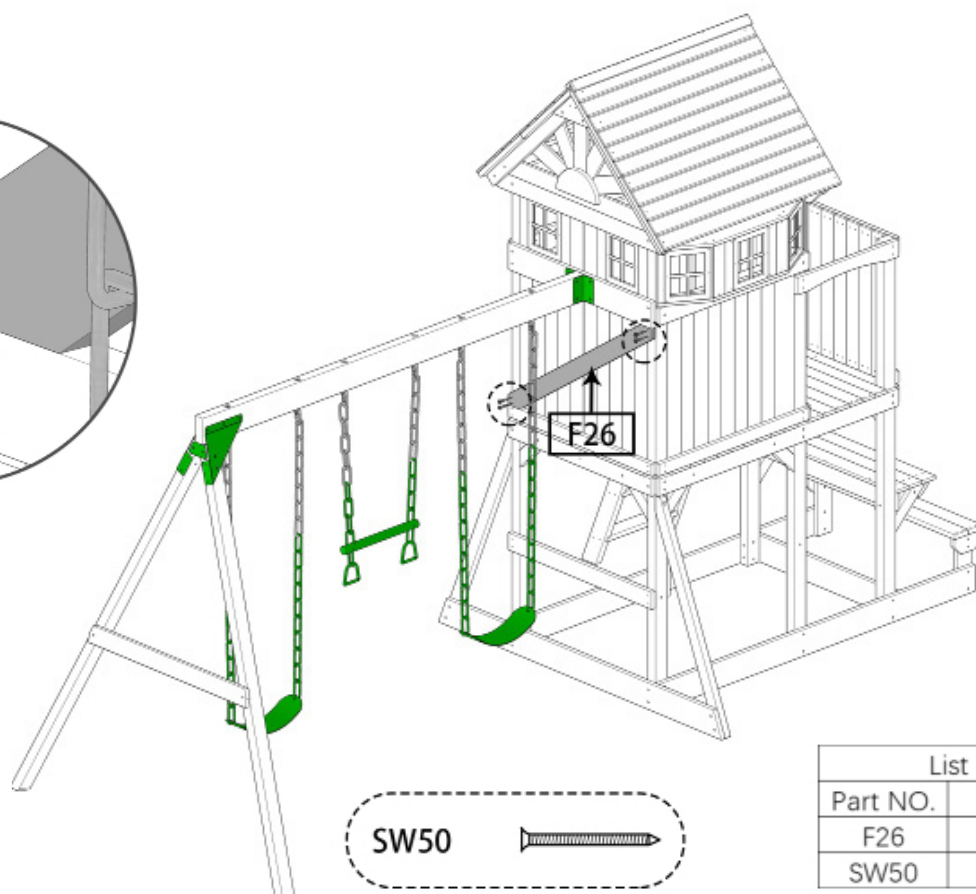 


SW50



List

Part NO.	Qty
F26	1
SW50	4

 STEP 41

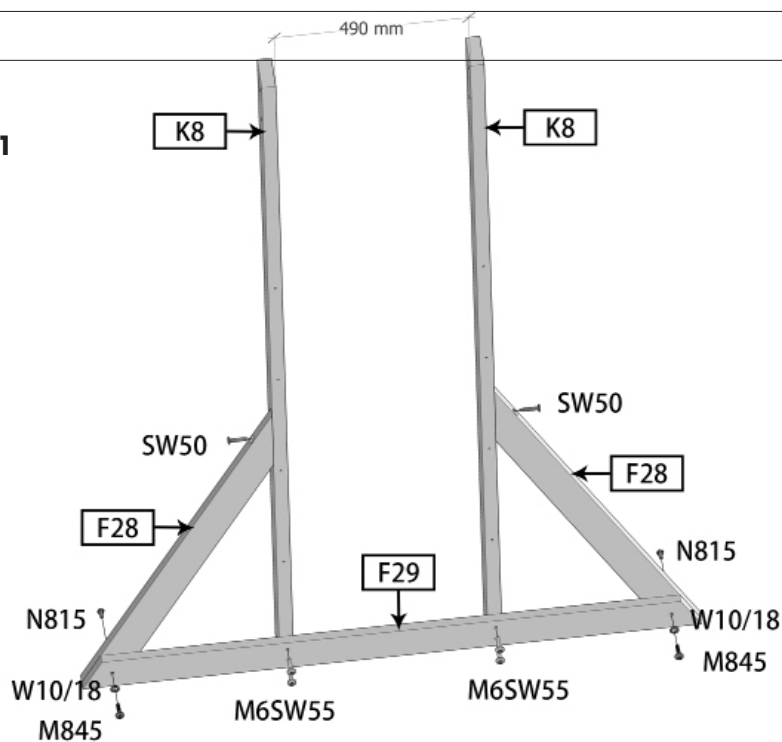

M845



N815



SW50




W10/18



List



Part NO.	Qty
F28	2
F29	1
K8	2
M845	2
SW50	2
M6SW55	4

 STEP 42

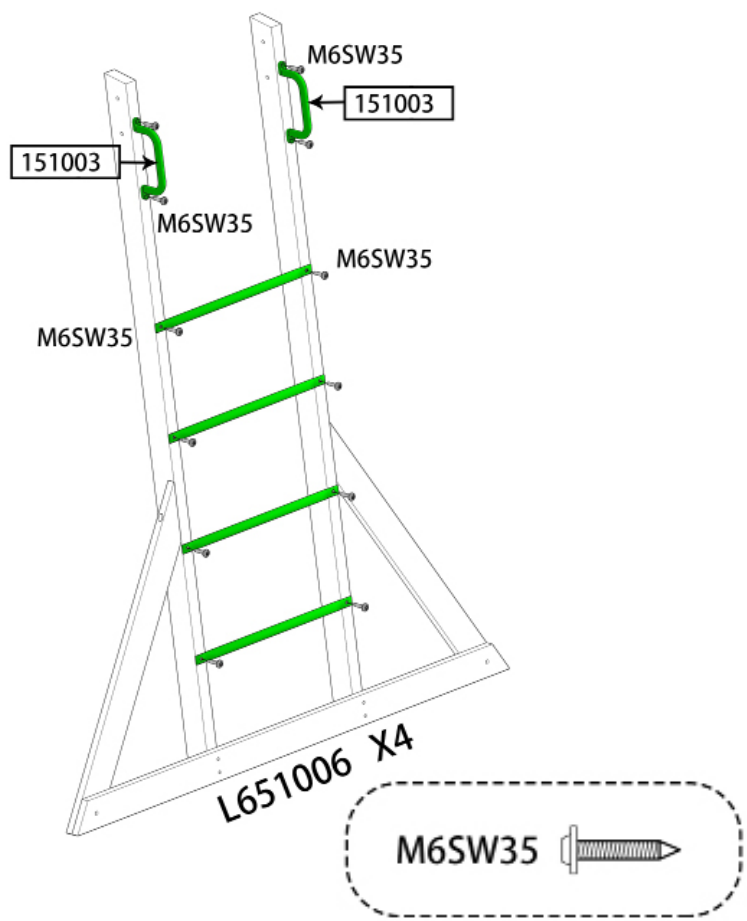


List	
Part NO.	Qty
M6SW35	12
L651006	4
151003	2

  STEP 43

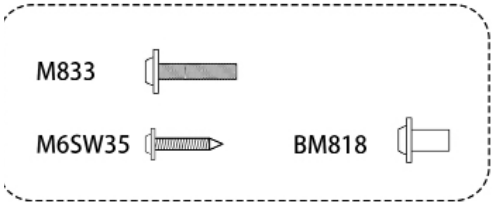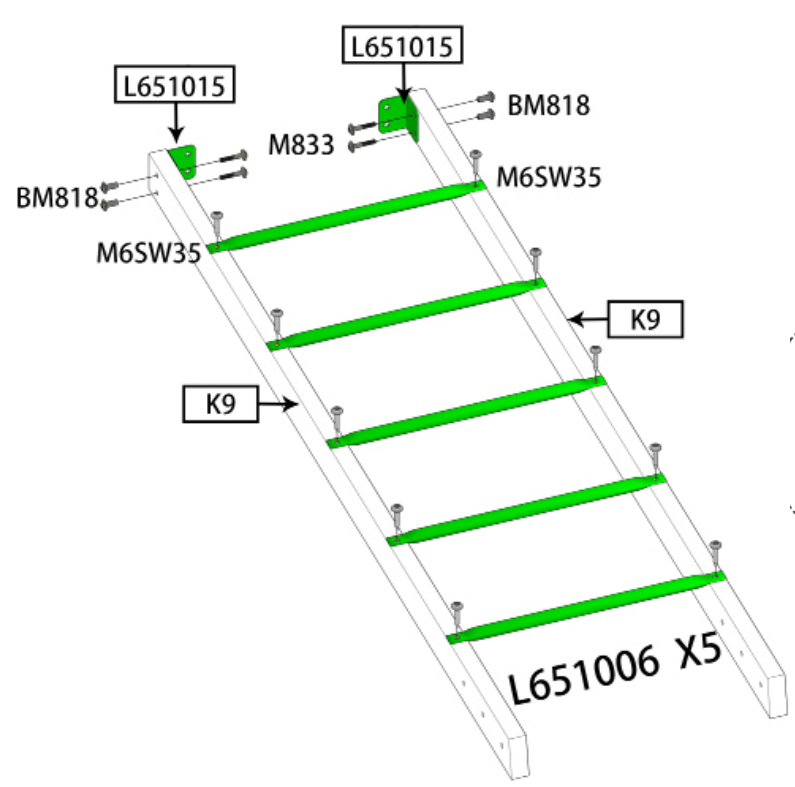

List	
Part NO.	Qty
K9	2
L651015	2
L651006	5
M833	4
BM818	4
M6SW35	10

 STEP 44

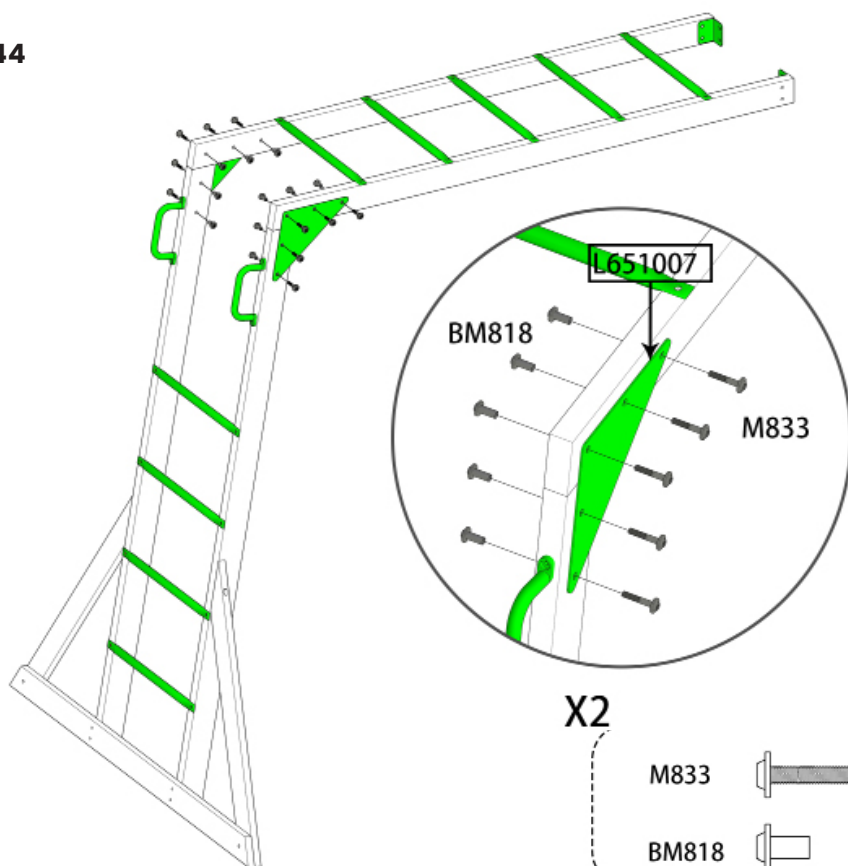

X2

M833




BM818



List	
Part NO.	Qty
L651007	2
M833	10
BM818	10

 STEP 45

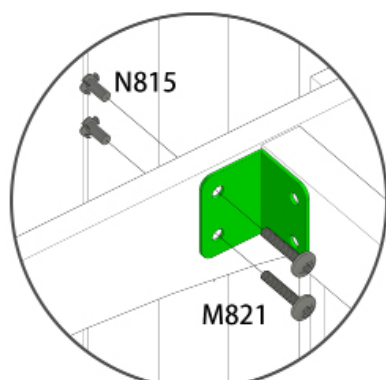

X2


M821





N815



List	
Part NO.	Qty
M821	4
N815	4

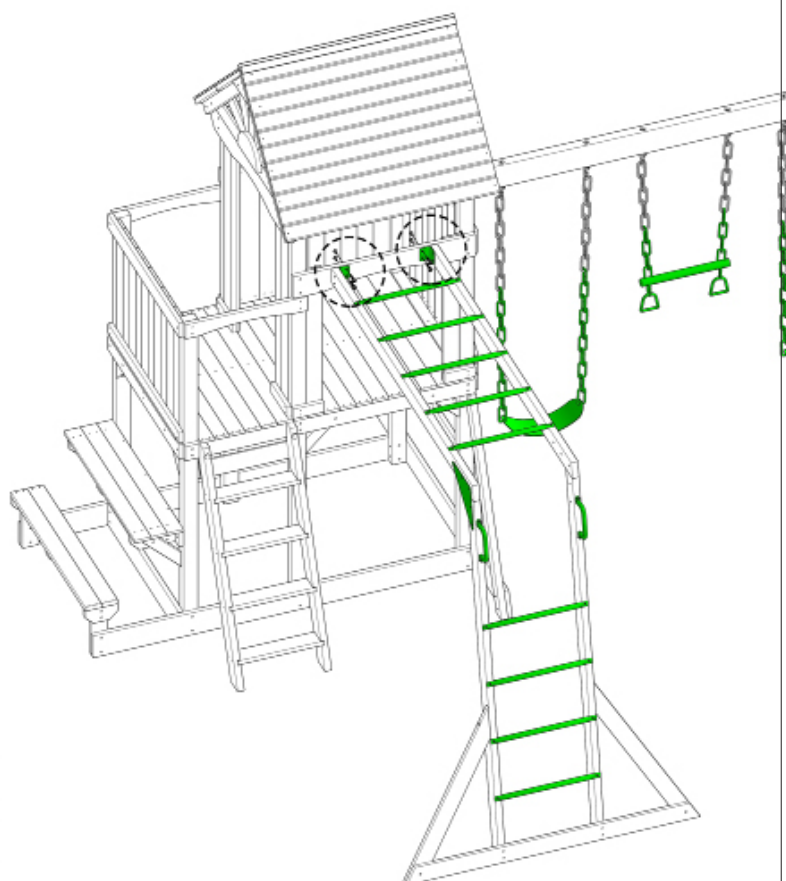 

  STEP 46


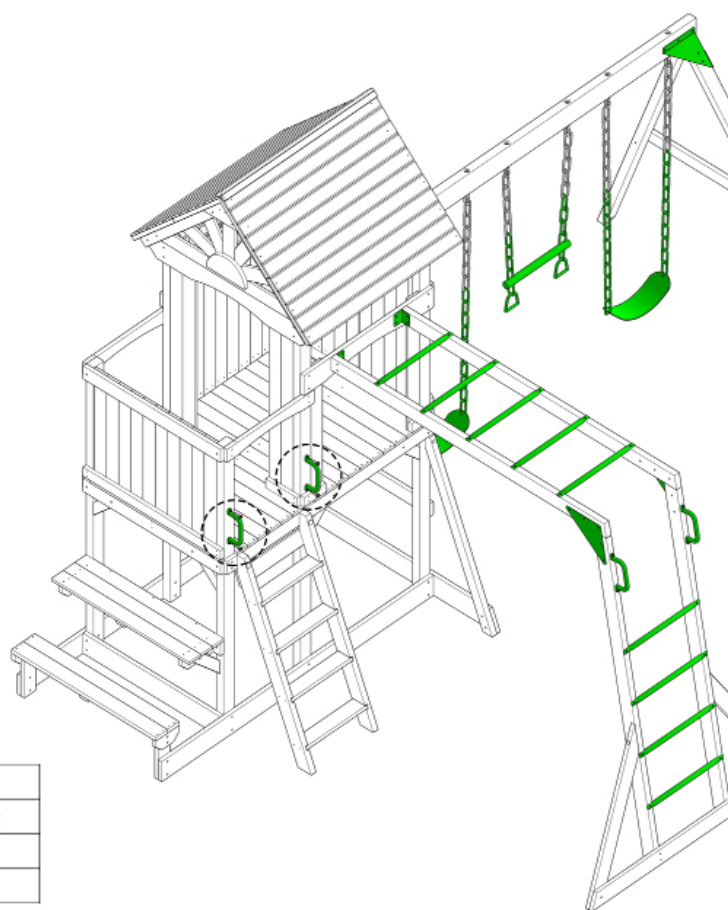
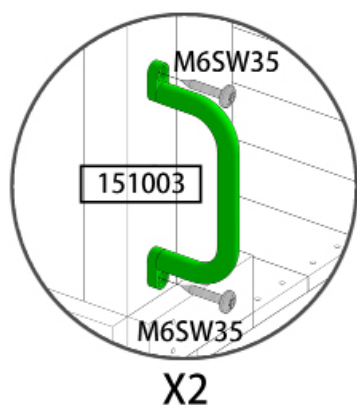


M6SW35



List	
Part NO.	Qty
151003	2
M6SW35	4

   STEP 47

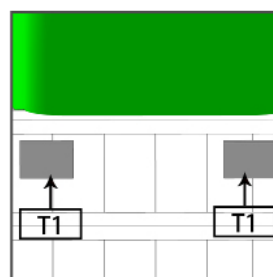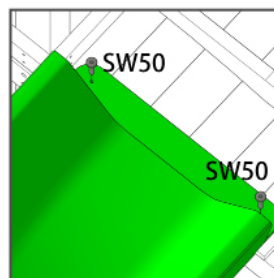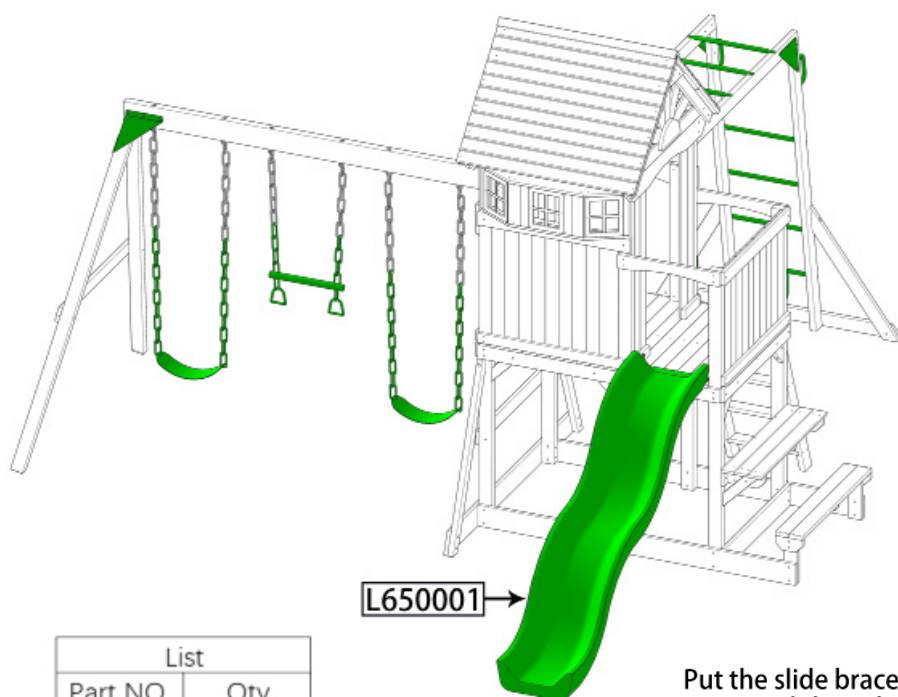


List	
Part NO.	Qty
T1	2
L650001	1
SW50	2

SW50




Put the slide braces T1 under the floor boards and fix the slide with floor and slide braces together

 STEP 48

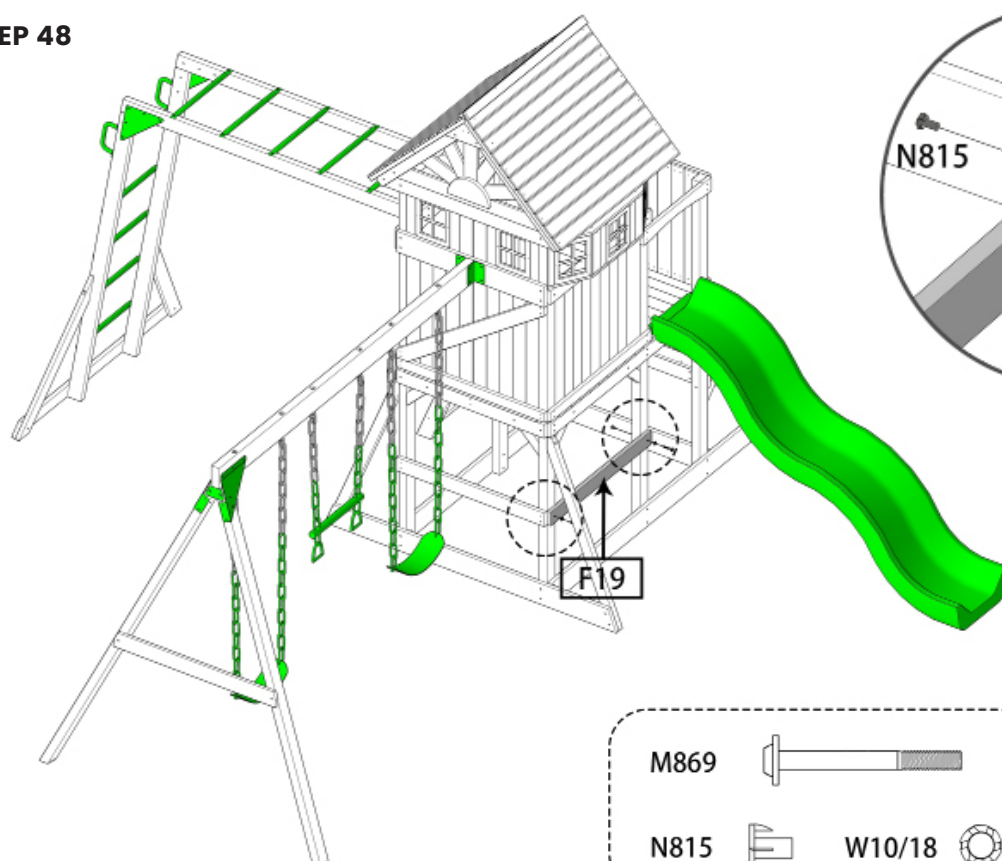

M869

 

N815




W10/18



List	
Part NO.	Qty
F19	1
M869	2
N815	2
W10/18	2

 STEP 49


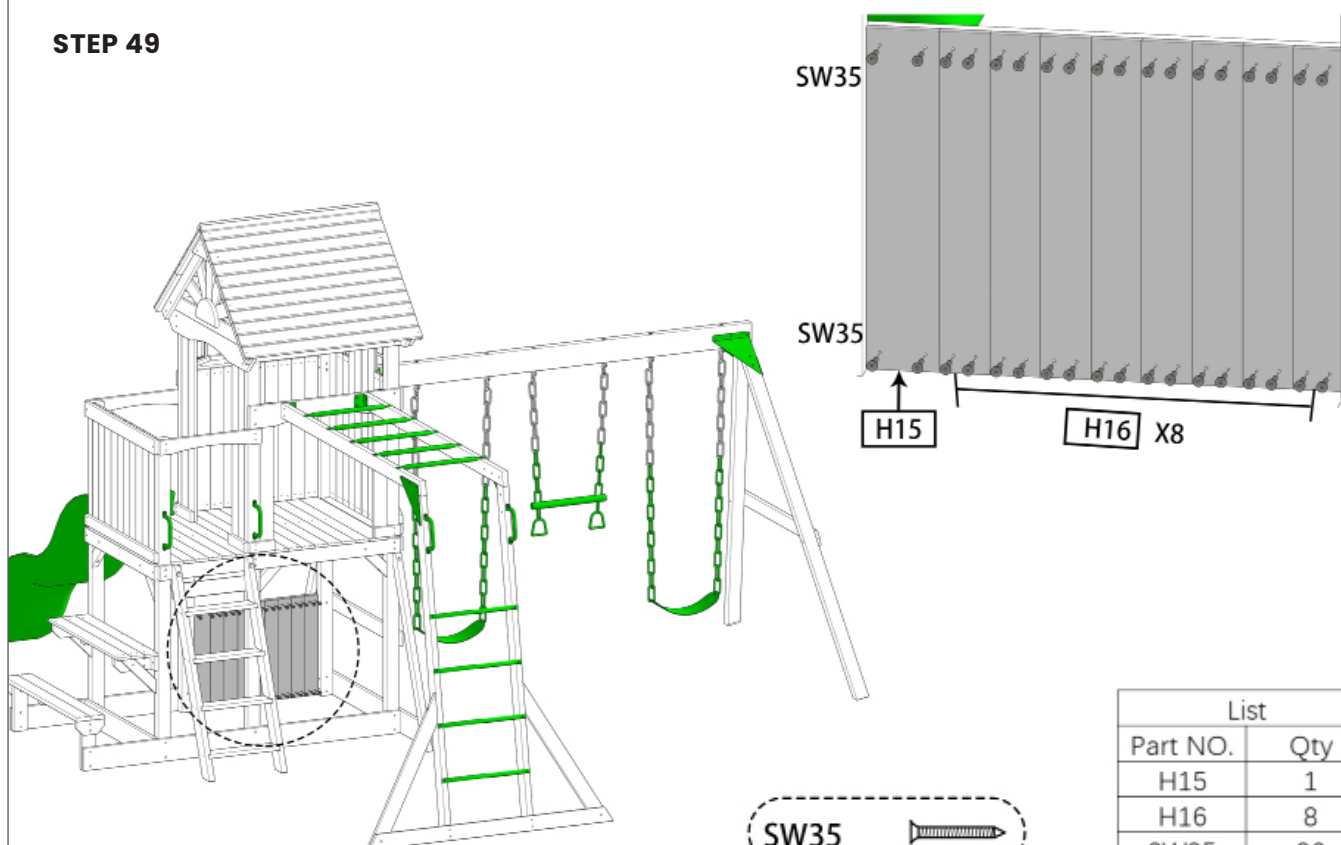


SW35



List	
Part NO.	Qty
H15	1
H16	8
SW35	36

  STEP 50

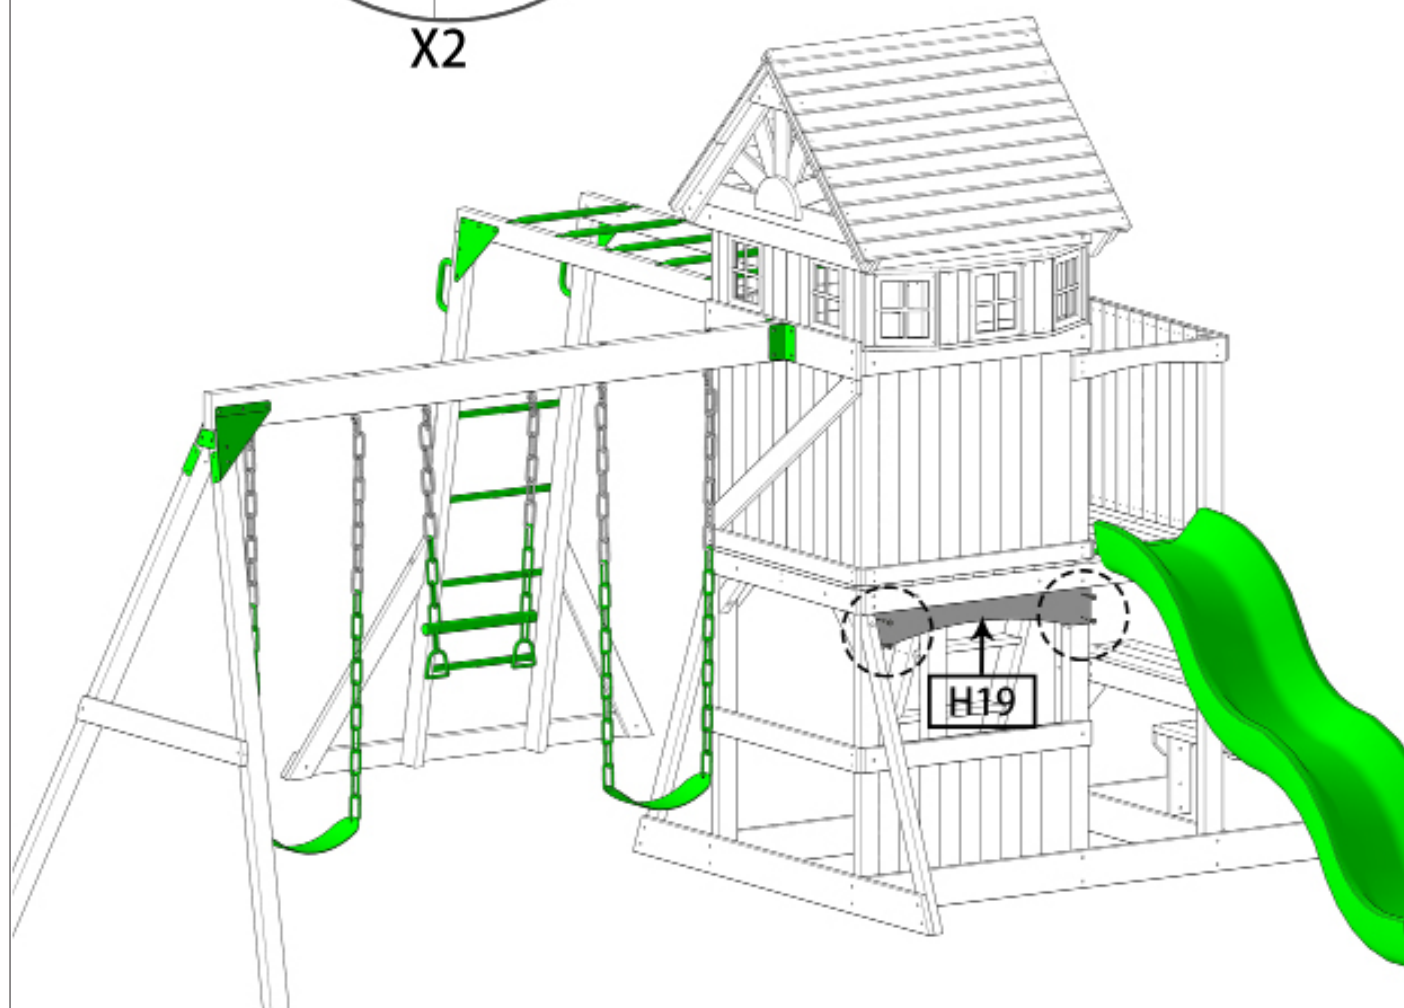
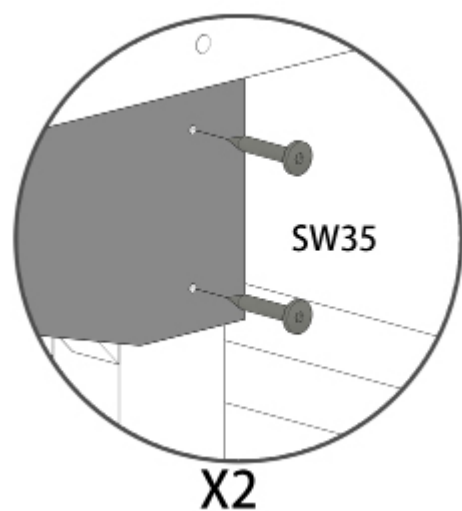


SW35



List	
Part NO.	Qty
H19	1
SW35	4

  STEP 51

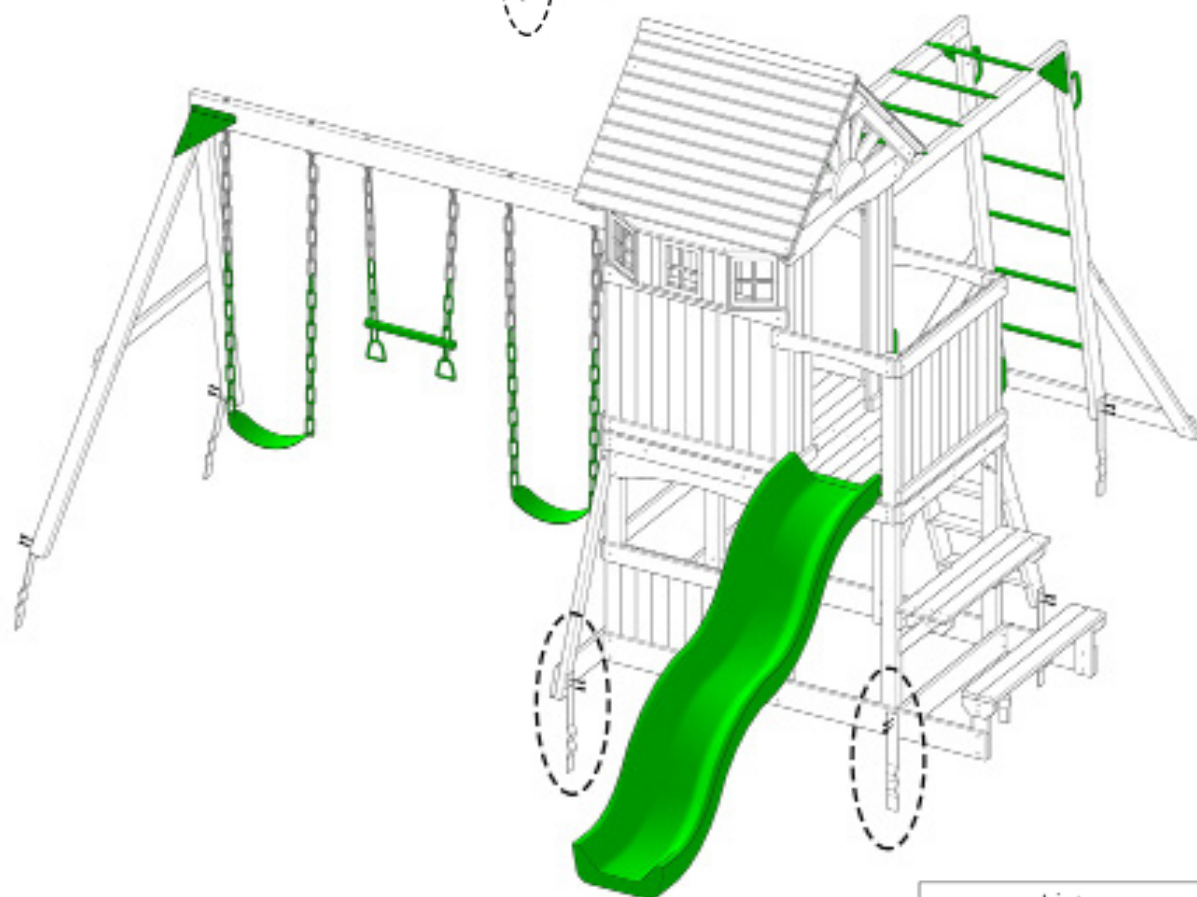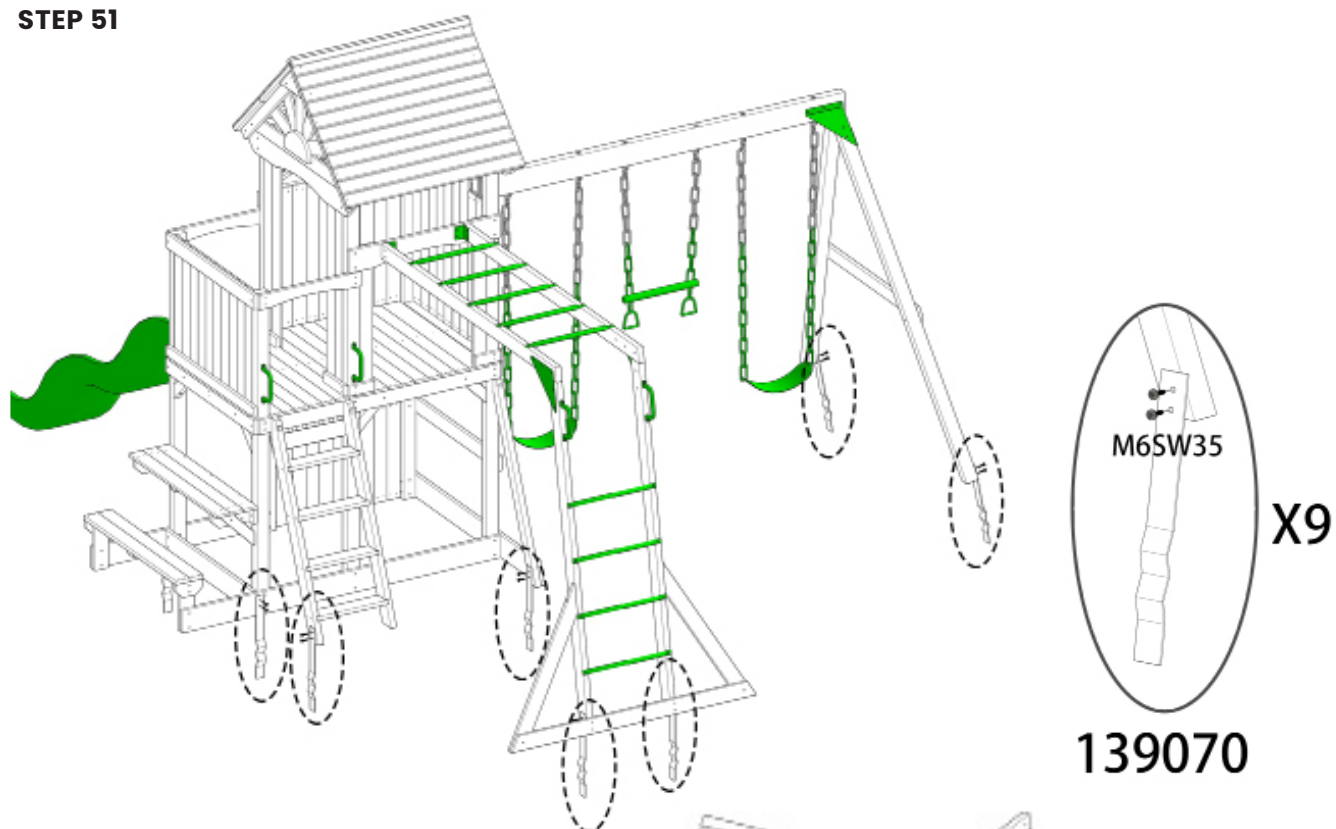

List	
Part NO.	Qty
139070	9
M6SW35	18

V. MAINTENANCE



WARNING: Please keep for future reference.

We recommend regular maintenance to be conducted at the beginning of each season as well as at regular intervals during the usage session for your play equipment to ensure all main parts/fixings are tightly secured, well-oiled and intact to avoid failure, injury or hazards.

GENERAL ADVICE

It is of particular importance that this is followed at the beginning of each season as well as at regular intervals during the usage season.

- Check the accessories monthly as well as the play equipment's structure to prevent falling risks.
- Check and retighten screws, bolts, and all other hardware elements as necessary.
 - a. Do not over tighten to avoid damaging the thread or cracking the surrounding wood.
- Check all coverings and bolts for sharp edges and replace when required.
- Lubricate all moving metallic parts.
- When signs of oxidation and / or rust appear on various metallic parts of your equipment, sand rusted areas and tubular members and repaint using a non-lead-based paint when required.
- Where applicable: check swing seats, chains, ropes, and other means of attachment for evidence of deterioration.
- Replace when required in accordance with the owner's manual.

If your play structure is disassembled, be sure to clearly mark any attached metal plates to prevent accidents. Check all bolt covers and sharp edges and replace them if necessary.

For longer accessory life, we suggest storing them during the winter.

VI. WOOD ADVICE

Our products are manufactured from premium timber. Great care is taken in selecting, machining, and treating the timber before it is sold to you.

1. Inspect wood parts monthly. The grain of the wood sometimes will lift in dry periods causing splinters to appear. Light sanding may be necessary to maintain a safe environment. Treating your Product with protection (sealant) after sanding will help prevent severe checking/splitting and other weather damage.
2. The wood is treated via high temperature drying, degreasing and is stained against wood rot and insect damage (Termites not included). This is not a permanent treatment as weather conditions can wear it down. We recommend once or twice a year, depending on your climate conditions, you must apply some type of protection (sealant) to the wood of your unit. Prior to the application of sealant, lightly sand any "rough" spots on your set. **Please note this is a requirement of your warranty.**

Bear in mind that timber is a natural product and may experience changes throughout the course of its life. It may:

 
- Develop openings/checks (gaps, slits, apertures, cracks) along the line of the grain.
- Fade as the timber reacts with sunlight.

All woods are hygroscopic, that is, it will absorb or discharge moisture to attain equilibrium with the surrounding atmosphere. Timber openings/checks occur due to the moisture content between internal and outer surfaces of the timber. No two pieces of wood are exactly alike. Each piece has its own characteristics and personality and reacts differently to climate changes. When any wood products are exposed to the elements, it develops 'wood checks'. A check is the radial separation of the wood fibres running with the grain of the wood. These are caused by the varying temperature and moisture conditions. A check does not affect the strength or durability of the wood or structural integrity of the play set.

WHEN SHOULD WOOD CRACKS BE A CONCERN?

Most of the wood splits will never become large enough to affect the reliability and strength of our products, however, there can be rare cases where splits can occur. This happens when a crack develops past the halfway point from the timber, splitting it into two separate pieces.

Feel free to contact us with detailed pictures of your product so we can assess and ensure that your playground remains safe.

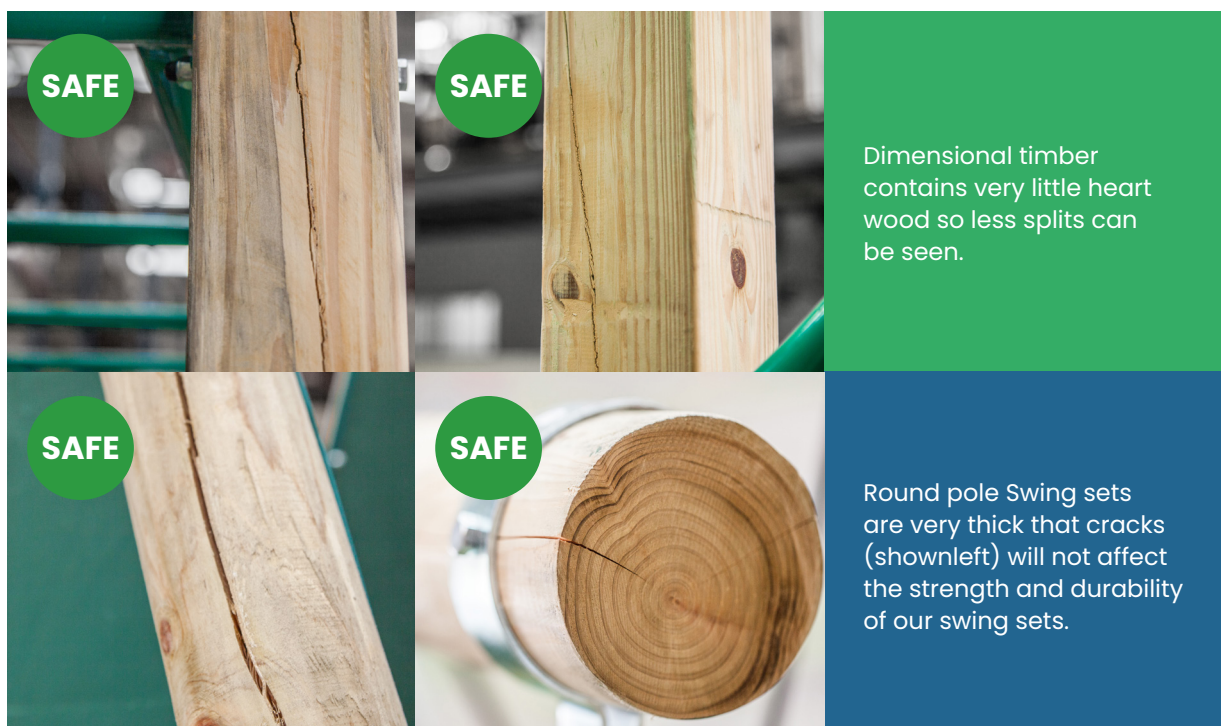

3. Mould and Mildew

Protecting against mould and mildew on your outdoor equipment is an important step in maintaining your backyard. Mould may develop for several reasons, such as certain weather conditions, improper drainage or infrequent usage. Here we'll share our tips for keeping your outdoor areas free of mould and mildew so that you can enjoy your backyard with peace of mind.

Once you spot mould on your equipment, it's important to start clearing it up straight away. The first step is to scrub it off with soap and water, until all the visible signs of mould are removed. It's important to remember however, that just because you can't see it anymore doesn't mean it's gone.

The next step is to kill off the remaining mould so that it doesn't grow back. Here are a few options, but keep in mind these should be used independently. Don't mix or combine these methods at the same time.

Mould Killer or Removal Spray

You can purchase off-the-shelf removal sprays that destroy mould either indoors or outdoors. For these products, make sure to follow the product instructions as well as wearing protective gloves to avoid contact with skin.

Bleach

A solution of bleach and water can also be highly effective in killing mould. For this method, mix the water and bleach on a 1 to 1 ratio, then use a sponge or brush to scrub the affected area. You can also use a higher concentration of bleach for spot treating. After bleach treatment, make sure to rinse off your equipment and allow to dry.

Vinegar

If mould is still lingers after applying bleach or a mould spray, vinegar will be an effective option for removing stubborn remnants. Vinegar will kill most types of mould and is best for nonporous materials like hard plastics or metal. The best method is to fill a spray-bottle with undiluted white vinegar of at least 5% acetic acid. Spray the affected area, then let sit for around an hour. Make sure to thoroughly rinse off afterwards.

For wooden equipment, you can add a coat of paint or stain after it has thoroughly dried.

Some people may find that mould keeps resurfacing after cleaning on certain areas. This can be due to a few reasons, such as poor sunlight. Areas without direct sun are more likely to become damp and take longer to dry off after rain. Consider removing obstacles or rearranging your equipment so that it receives more sunlight, which will also help to kill the mould once it develops.

For more information: [*www.lifespunkids.com.au/natural-timber*](http://www.lifespunkids.com.au/natural-timber)

VII. CLEANING

Do not use any abrasive cleansers for the cleaning. Use a soft, damp cloth to eliminate dirt and dust.

VIII. WARRANTY

AUSTRALIAN CONSUMER LAW

Many of our products come with a guarantee or warranty from the manufacturer. In addition, they come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Full details of your consumer rights may be found at www.consumerlaw.gov.au.

Please visit our website to view our full warranty terms and conditions:
www.lifespankids.com.au/Warranty-Policy-Kids

WARRANTY AND SUPPORT

Any claim against this warranty must be made through your original place of purchase. Proof of purchase is required before a warranty claim may be processed. If you have purchased this product from the Official Lifespan Kids website, please visit www.lifespankids.com.au/warranty-form

For support outside of warranty, if you wish to purchase replacement parts or request a repair or service, please visit www.lifespankids.com.au/warranty-form and fill in our Repair/Service Request Form or Parts Purchase Form.

